


# User Manual

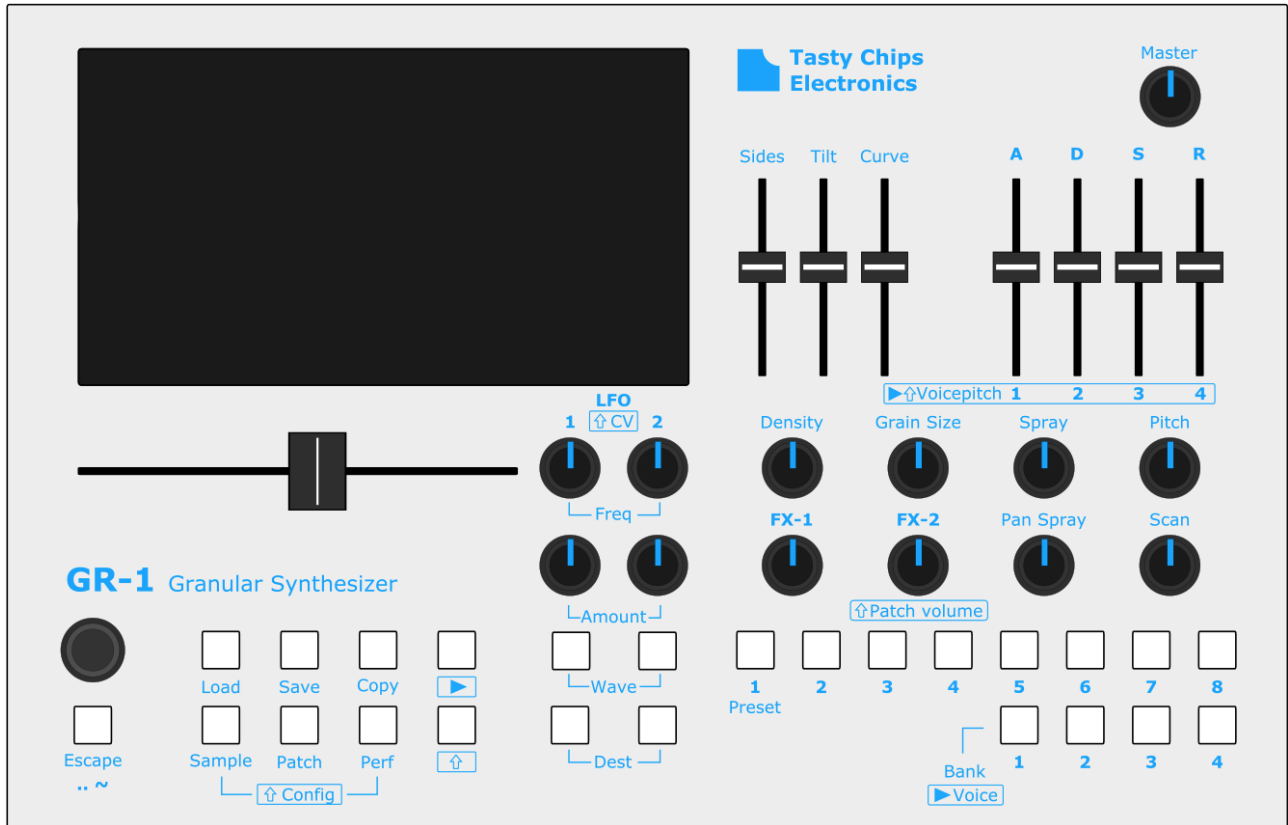

## GR-1 Granular Synthesizer

**This manual is written by:**

Pieter van der Meer

Tasty Chips Electronics (2017-2025)

**Illustrated by:**

Luc Derks

# The history of the GR-1

The idea of the GR-1 came up when our friend Erwin Tuijl, from the band “Pocket Knife Army”, brought up the idea of a hardware granular synthesizer.

Pieter van der Meer, Koen Pepping and Jasper Andrea representing the Tasty Chips Team (2017), took on the idea and turned it into reality.

After a lot of brainstorm sessions, Hardware revisions, test sessions, hard work and dedication by our team, the GR-1 Granular Synthesizer was born.

We love this thing and we invested a lot into building it. We hope you will enjoy and love the GR-1 as much as we do!

In 2018 through 2022 many new features like live sampling, different play modes, multi-timbrality, and networking were added. In 2025 file handling and the GUI were totally overhauled. As we write this, the GR-1 is still being improved.

Thank you for buying the GR-1 Granular Synthesizer!

-Tasty Chips Electronics (2017-2025)



# Table of Contents

|                                      |    |                                             |    |
|--------------------------------------|----|---------------------------------------------|----|
| The history of the GR-1.....         | 3  | A clean slate.....                          | 36 |
| Version naming.....                  | 7  | MIDI.....                                   | 38 |
| Contents of the box.....             | 8  | MIDI in.....                                | 38 |
| Warranty.....                        | 9  | MIDI thru.....                              | 39 |
| Important notice!.....               | 10 | USB MIDI.....                               | 39 |
| GR-1 Specifications.....             | 13 | MIDI OUT (USB only).....                    | 39 |
| Quick start guide.....               | 14 | Set MIDI channel.....                       | 40 |
| Global Overview.....                 | 15 | MIDI program changes and banks.....         | 40 |
| Position slider.....                 | 16 | List Of Tested (USB)MIDI controllers and    |    |
| Display.....                         | 16 | keyboards.....                              | 41 |
| Grain window.....                    | 17 | Audio Input.....                            | 42 |
| Voice Envelope section.....          | 17 | Configuration.....                          | 42 |
| Knob Section.....                    | 18 | Rec level.....                              | 42 |
| LFO section.....                     | 18 | Monitor level.....                          | 42 |
| Presets.....                         | 18 | Looping rec.....                            | 43 |
| Menus, and disk access.....          | 19 | Record start mode.....                      | 43 |
| Select knob & Escape button.....     | 20 | Sample size.....                            | 43 |
| Global Overview (Back Panel).....    | 21 | Clear sample.....                           | 43 |
| On/off switch & DC adapter.....      | 21 | Recording samples.....                      | 43 |
| MIDI in & thru.....                  | 21 | Supported USB sound cards.....              | 45 |
| USB connection.....                  | 21 | Importing Samples from external drives..... | 48 |
| CV & Gates.....                      | 21 | Sample Formats.....                         | 48 |
| Audio output.....                    | 21 | Loading samples.....                        | 48 |
| Headphone connection.....            | 22 | Copy samples.....                           | 49 |
| Granular Controls.....               | 23 | Saving samples.....                         | 49 |
| Density.....                         | 23 | Naming.....                                 | 50 |
| Grain Size.....                      | 23 | Sample Tuning.....                          | 51 |
| Spray.....                           | 24 | Patch Load & Save.....                      | 52 |
| Pan Spray.....                       | 24 | Saving a patch.....                         | 52 |
| Panning.....                         | 25 | Naming.....                                 | 52 |
| Scan.....                            | 25 | Incremental patch saves.....                | 53 |
| Direction.....                       | 26 | Loading a patch.....                        | 53 |
| Tape Mode Controls.....              | 27 | Copy a patch.....                           | 54 |
| Loop Start & End.....                | 27 | Kill a preset.....                          | 55 |
| Low Frequency Oscillators (LFO)..... | 28 | Patch volume.....                           | 55 |
| Rate.....                            | 28 | Patch Configuration Menu.....               | 56 |
| Waveforms.....                       | 28 | Patch configuration.....                    | 56 |
| Aux LFO waveform.....                | 29 | Patch Global Settings.....                  | 56 |
| Modulation matrix.....               | 30 | Name.....                                   | 56 |
| MIDI clock synchronization.....      | 30 | Sample mode.....                            | 56 |
| Control Voltage (CV).....            | 31 | Spawn mode.....                             | 56 |
| CV inputs:.....                      | 31 | Grain stealing threshold.....               | 57 |
| CV Amount & Destination.....         | 31 | Keyboard tuning.....                        | 57 |
| Gate output.....                     | 32 | Grain Key Sync.....                         | 57 |
| Example patch:.....                  | 32 | Grain Clock Sync.....                       | 57 |
| Basic Tutorials.....                 | 34 | Sample loop confinement.....                | 57 |
| Modifying and saving.....            | 34 | Resample anti-aliasing.....                 | 57 |
| From sample to patch.....            | 35 | Granular glide.....                         | 57 |

|                                   |    |                                           |     |
|-----------------------------------|----|-------------------------------------------|-----|
| Patch Scan Settings.....          | 58 | Pitchbend range.....                      | 67  |
| Scan Key Sync.....                | 58 | DSP Metering.....                         | 67  |
| Scan loop confinement.....        | 58 | MPE.....                                  | 68  |
| Scan mode.....                    | 58 | File selector: Sound previews.....        | 68  |
| Scan clock sync.....              | 58 | Send precision CC.....                    | 68  |
| Patch Play Mode Settings.....     | 58 | Loading and saving performances.....      | 69  |
| Responds to play.....             | 58 | Saving a Performance.....                 | 69  |
| Slider root note.....             | 59 | Loading an internal performance.....      | 70  |
| Range.....                        | 59 | Loading an external performance.....      | 70  |
| Free scale.....                   | 59 | Initializing a performance.....           | 71  |
| Play scale.....                   | 59 | Init from samples folder.....             | 73  |
| Patch FX settings.....            | 60 | Copy preset to “all”.....                 | 73  |
| FX type.....                      | 60 | The File Manager.....                     | 74  |
| FX mapping.....                   | 60 | Copying and deleting.....                 | 75  |
| Filter mode.....                  | 60 | Unmounting USB drives.....                | 75  |
| Sub-oscillator.....               | 60 | Notes.....                                | 76  |
| Sub-osc balance.....              | 61 | Network file sharing.....                 | 77  |
| Patch Modulation Settings.....    | 61 | Logging in.....                           | 77  |
| LFO2->Delay sync.....             | 61 | Copying, moving, and renaming files.....  | 78  |
| Cubic LFO amount curve.....       | 61 | Factory reset via file sharing.....       | 79  |
| LFO 1 or 2 Sync.....              | 61 | SFTP.....                                 | 80  |
| LFO 1 or 2 Key Sync.....          | 61 | Timbrality.....                           | 82  |
| LFO 1 or 2 max freq.....          | 61 | Entering multitimbral mode.....           | 82  |
| Mod Wheel -> LFO 1 or 2.....      | 61 | Polyphony.....                            | 83  |
| LFO1->2 Cross Modulation.....     | 61 | Forms of polyphony.....                   | 83  |
| LFO 1 or 2 Quantization.....      | 61 | Voice timbre.....                         | 83  |
| Modulation Matrix.....            | 62 | Note hold.....                            | 83  |
| MPE Position clipping.....        | 63 | Voice stealing.....                       | 83  |
| Patch Keyboard.....               | 64 | Grain stealing.....                       | 83  |
| Keyboard split 1,2.....           | 64 | Audio, and avoiding drop-outs.....        | 84  |
| Area 0..2 – Pos offset.....       | 64 | Master volume and patch volume.....       | 84  |
| Area 0..2 – Keyboard -> Pos.....  | 64 | Grain window modification.....            | 84  |
| Area 0..1 – Pitch.....            | 64 | Temperature and the internal fan.....     | 85  |
| System Configuration.....         | 65 | Menu screens.....                         | 86  |
| Configuration.....                | 65 | MIDI Command table.....                   | 89  |
| Check Firmware Upgrade.....       | 65 | Firmware updates.....                     | 95  |
| Shutdown.....                     | 66 | Frequently Asked Questions (FAQ).....     | 97  |
| Enable Samba file sharing.....    | 66 | Troubleshooting.....                      | 100 |
| Disk space.....                   | 66 | File systems (USB disk/stick format)..... | 100 |
| Midi Channels.....                | 66 | Multiple USB sticks or USB drives.....    | 100 |
| Select encoder invert.....        | 66 | Firmware upgrades.....                    | 100 |
| LED Brightness.....               | 66 | Crashes (GRAVE-ULAR).....                 | 101 |
| Potentiometer Setpoints.....      | 66 | Lightning bolts.....                      | 101 |
| Direct shift.....                 | 66 | Slow USB drive or stick.....              | 102 |
| ADSR Slider mode.....             | 67 | Reflashing the internal storage.....      | 102 |
| Load sample: convert to 44.1..... | 67 | Credits.....                              | 105 |
| Big slider controls menu.....     | 67 | GR-1 dev team.....                        | 105 |
| MIDI CC 2 CV.....                 | 67 | Hired.....                                | 105 |
| MIDI CC updates visuals.....      | 67 | Hardware Granular Idea.....               | 105 |
| Patch switch -> stop grains.....  | 67 | Special thanks to.....                    | 105 |

Contact.....106

# Version naming

## Version naming convention

This document's version is written as:

v<major version>.<minor version>.<patch level>

v<number>.<number>.a-z

The major and minor versions follow the GR-1 firmware versions. The patch level is separate from the firmware version's patch level (a correction in the manual text vs a software fix in the firmware).

Major version updates involve a complete redesign of the user interface and possible feature additions. Minor version updates involve feature additions.

Firmware patch level updates [0,1,2,3,4,...] purely involve bug fixes.

Document patch level updates [a,b,c,d,e,...] involve additions to documentation: yet undocumented features, typos, and errata.

## Document version

3.4.c

## Applicable firmware version

3.4.\* (3.4.0, 3.4.1, etc)

# Contents of the box

Firstly, congratulations! You are now the proud owner of the Tasty Chips Electronics GR-1 granular synthesizer.

The contents:

- The box with schematic drawing of the GR-1 on its top side. NOTE: this box features a sticker with serial number GR-XXXX!
- External region-independent AC/DC power supply, boxed. NOTE: AC cord not included.
- Quick start guide (single A4 sheet).
- The GR-1 unit. Later units include a sticker with serial number (GR-XXXX) on the bottom plate. The display has a protective sticker on it, which may be peeled off if you prefer.

# Warranty

The GR-1 comes with a **2 (two) year** warranty on factory defects. Warranty is effective from the date of shipping of the unit.

There is no need to register your unit with us. You buy it, you own it, even second-hand. As the owner you're always entitled to the unit's warranty, *within the limits specified in this chapter*. For instance, if you buy a second-hand unit that's 1 year old, you still have 1 year factory warranty left.

“Factory defects” covers:

- Missing parts (see previous section)
- Broken parts (for instance: cracked screen, broken buttons, knobs or sliders)
- Non-functional unit (“dead on arrival”)
- Semi-functional unit with serious defect (for instance: inability to access any USB stick or USB hard disk, left and/or right channels permanently muted).

In case of such defects, you can reach us at [info@tastychips.nl](mailto:info@tastychips.nl), and claim your unit to be repaired. We'll contact you with all the necessary information for return shipping and will refund all postage costs incurred. Please understand that shipping and repairs may take several weeks depending on the severity of the defect and your location in the world.

We'll first attempt to repair your unit. If, and only if, the unit is damaged beyond repair, we'll send a new unit.

In some trivial cases like missing power adapter, or broken SD card, we will send the replacement parts directly to you, because they may be easily replaced.

## Important notice!

### Warning!

Do not use an adapter other than the one the that comes with the GR-1.

Do not connect high voltage to the input/output connectors of the GR-1.


Avoid this product from falling, spillage of fluids, dust and keep this product out of damaging environments. Keep your GR-1 out of range of children and pets.

Do not open this product. Please contact Tasty Chips Electronics when (part of) your GR-1 does not work (when you see a greyscreen), contact information can be found on the last page of this manual.

Please treat your GR-1 with love and affection <3

### Power supply and power lead

The GR-1 comes with its own external AC/DC power supply. A power lead is not supplied, however. This is because there are many types (one per world region), and most people have a couple lying around at home. For more information, look up the IEC-60230 C13/C14 cable specs. The so-called “kettle plug”. [[https://en.wikipedia.org/wiki/IEC\\_60320](https://en.wikipedia.org/wiki/IEC_60320)].

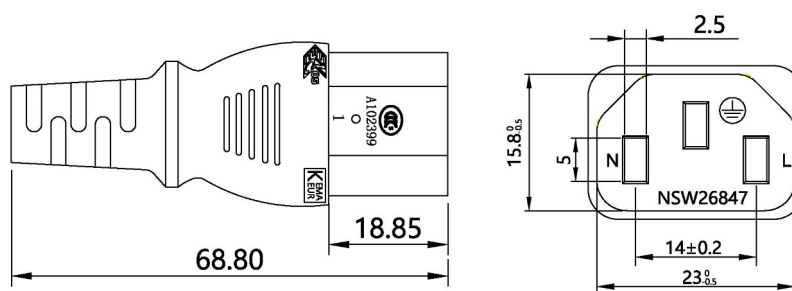

If you want a spare power supply:

- Brand: **Mean Well**
- Model: **GST18A09-P1J** or **GST18A12-P1J** (**GS18A09-P1J** on older units)

## **Power specification**

Please do not use an adapter other than included in the GR-1 package. Using another adapter or power source, may cause damage to your GR-1. It is protected against reverse polarity and over voltage, but extreme voltage will still cause damage! The GR-1 accepts heavier 9-12V adapters than the supplied 18W unit, but please contact us before trying!

Using USB devices with the GR-1 will draw extra power, but most of these devices: MIDI controllers, USB sticks, sound cards and even USB drives, are okay. However, it may be that connecting too many devices will cause power issues. Beware! If you are not sure, it's best to plug in devices only when the GR-1 has fully booted.

## **Reading this manual**

The GR-1 is designed as an easy-to-use device, but we also wanted to give the user access to more complex functions. To get the GR-1 up and running in a short time, you can read the Quick start guide. This manual is intended if you want to know more, and take full advantage of everything the GR-1 has to offer.

This manual starts with the basics like a feature overview, the one page quick start guide, followed by a global overview of all the on-board controls and sockets. It then continues on to a couple of quick tutorials that move beyond twiddling and playing, and into properly using the GR-1 to build your own patches, storing them, etc. Beyond that are the chapters with detailed explanation of all the menus and connectivity options (MIDI, sound cards, USB sticks), and details of the on-board controls.

For the sake of completeness and getting the most from your GR-1, there's still more background information on the GR-1 engine, followed with tables of all on-board and MIDI controls. The manual ends with FAQ, troubleshooting and firmware upgrade chapters.


# GR-1 Specifications

- **128 grains per voice**
- **11 voice** polyphony
- **4 part** multitimbral
- **Standalone** or **MIDI** controllable, **MPE** capable
- MIDI IN & MIDI THRU connection with **DIN** and **USB MIDI**
- **Audio input** and **live recording** via **USB soundcard**
- High quality stereo audio: internally 32 bit float, DAC: 44.1KHz, 106 dB SNR
- High quality headphone amplifier with dedicated volume control
- Quad core ARM Cortex-A running optimized Neon SIMD code
- 800 x 480 pixel, **7" TFT true color display**
- **Firmware updates** via **USB**, and over **internet**
- **Sample file uploads** in multiple formats via USB
- The GR-1 can handle 32 **sample files of 10 MB** (about 2 minutes long)
- Presets and performances can be saved to **internal flash (4GB, or 20GB** in later models) or **external (USB) memory**
- **2 control voltage** assignable inputs 0-5V with voltage protection
- **1 gate** output
- 12dB/oct digital **multimode filter** with direct and MIDI controls
- 2 assignable **LFO's** with waveforms (sine, random, saw, square) and direct controls
- **LFO wave recording**
- **4 banks of 8 presets** all hands-on accessible and overwritable
- ADSR amplitude envelope and Grain window envelope with direct controls
- Rotary encoder for configuration, file/sample selection. Configuration menus provide **extended possibilities** beyond what the pots and sliders offer.
- Access to **configuration** screen providing many more options
- **31 x 21.5 x 6 cm** aluminum casing
- Full MIDI control: All on-board sliders and knobs, and internal controls are represented as **MIDI CC**. Full support for program change, pitch bend, and the entire modulation matrix. High resolution **NRPN** CC's also supported on every control.
- Ability to read and write to many USB sticks or drives: ExFat, NTFS (Windows), HFS+ (Mac, read-only), Ext4 (Linux).


# Quick start guide

To get your GR-1 Granular Synthesizer up and running (stand alone), you can simply connect your headphone and follow the next steps:


1. Connect the adapter that came with your GR-1 to the DC connector at the back of your GR-1. Use your own IEC-60230 C13/C14 power lead "kettle plug lead" [[https://en.wikipedia.org/wiki/IEC\\_60320](https://en.wikipedia.org/wiki/IEC_60320)]. Turn on the power switch (see figure below). The display and buttons should now light up.

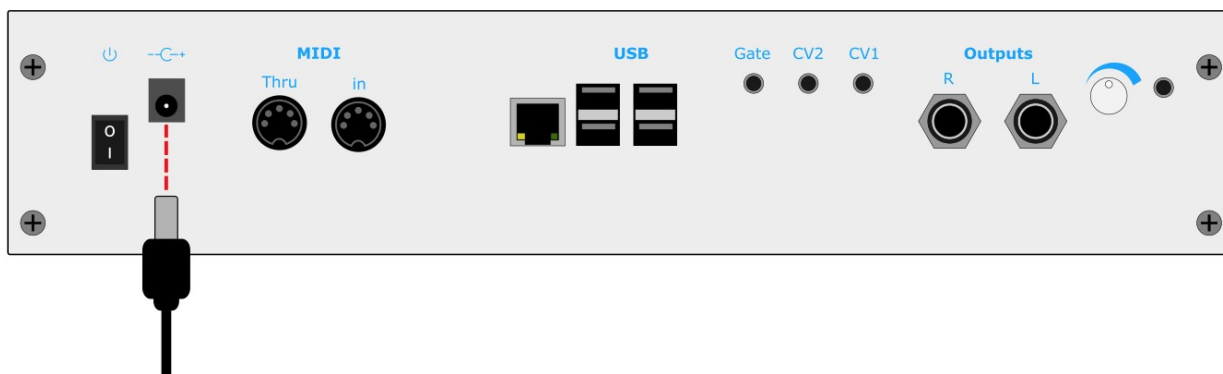


2. **1** Press the "play" button, a single voice will now play constantly and "bank" button 1 will light up, indicating voice 1 of 4 is playing.  
**2** Press **shift** and one of the other 3 bank buttons -> trigger voices 2-4 to play.  
**3** Holding down the **shift** while "Play" is lit, the ADSR sliders will now function as pitch controls for the 4 voices, making it possible to play chords and drones. See figure below.

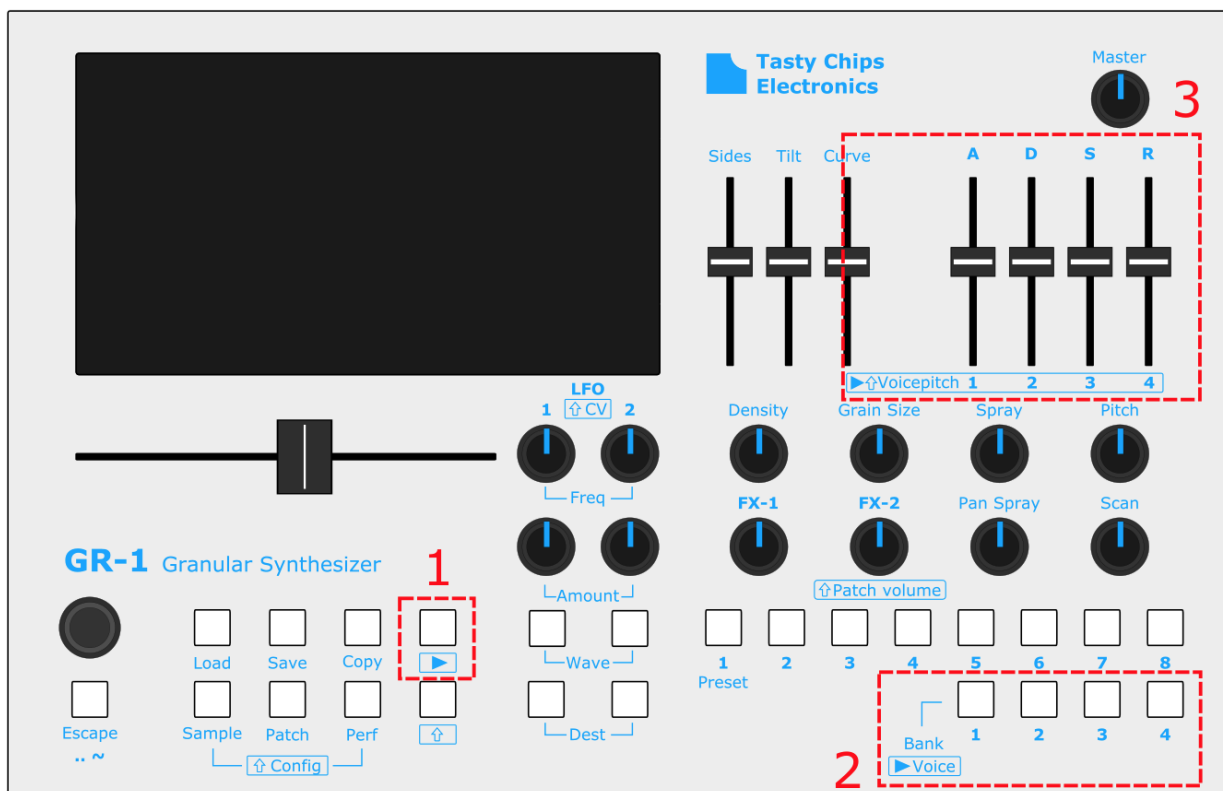

# Global Overview

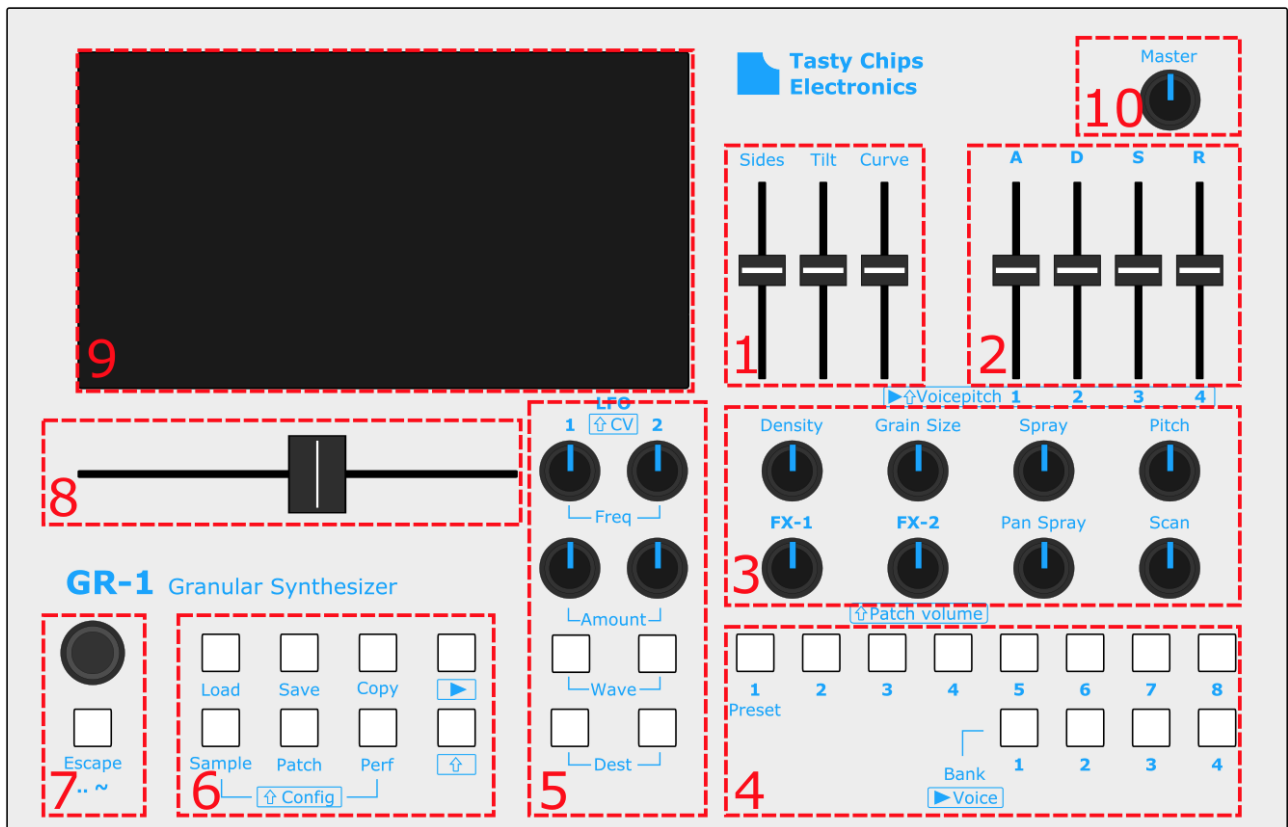


1. Grain window section (Sides, tilt, curve)
2. Envelope section (ADSR)
3. Knob section
4. Presets
5. LFO section
6. Playing, menus, copying, and disk access
7. Select knob & Escape button
8. Position slider
9. Display
10. Master Volume

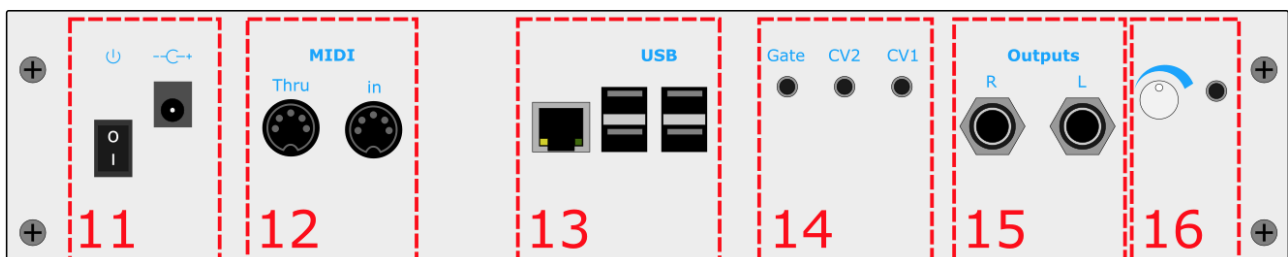

11. On/off switch & DC adapter
12. MIDI in & thru
13. USB connection
14. CV & Gates
15. Audio output
16. Headphone connection

## Position slider

The position slider is the control for the sample play position. The slider will correspond to the position of the vertical blue line in the sample display:

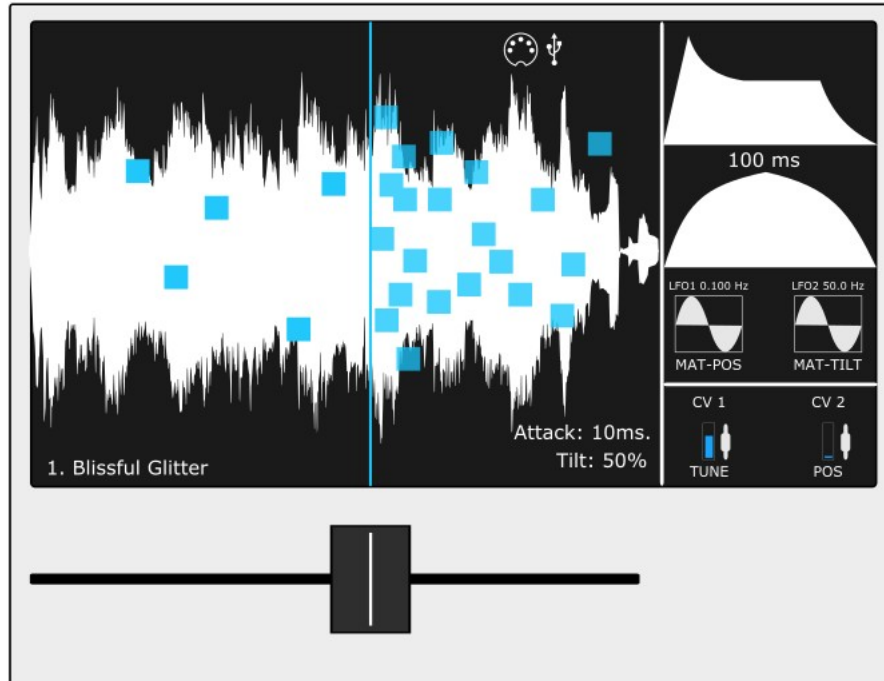

## Display

The display visualizes everything that is happening in your GR-1. Most icons and interface details are already explained in the previous paragraphs (ADSR, window, LFO waves etc.), but here are some icons that are not explained yet. The icons display (from left to right):




- MIDI events via DIN inputs
- MIDI events via USB
- Knob/slider event
- Potentiometer Setpoint locked (until value is matched by dialing to the set point).

## Grain window

The grain window is an amplitude envelope for each grain. The length of the window slopes is relative to the grain size that was set. In other words:

- A window is always exactly as long as the grain size.

The parameters of the grain envelope are (see the illustration below):

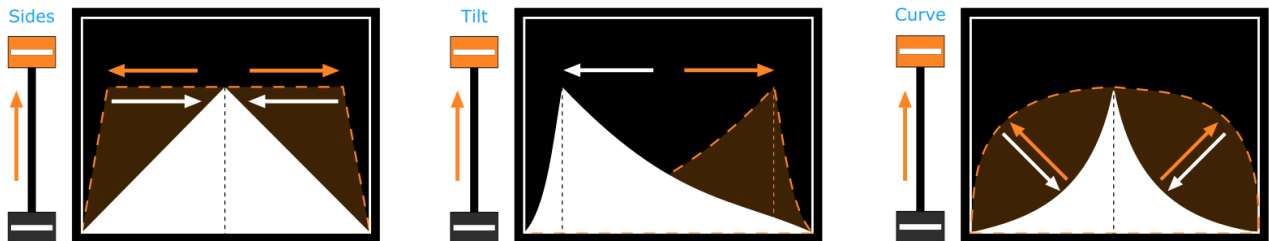


(The grain window envelope is shown on the middle-right side of the GR-1 display column.)

Note: Shift + Sides controls loop start and Shift + Curve controls loop end. They can be fine tuned by turning the “select” knob. The GR-1 supports down to 1 sample frame resolution on sample loops.

## Voice Envelope section

The amplitude envelope is triggered when a key/voice is active. The envelope is a standard Attack, Decay, Sustain, Release envelope. The Attack, decay and Release times can be set between 0-12 seconds. The Attack slope is linear, the Decay and Release slopes are exponential.

A = Attack    D = Decay    S = Sustain    R = Release

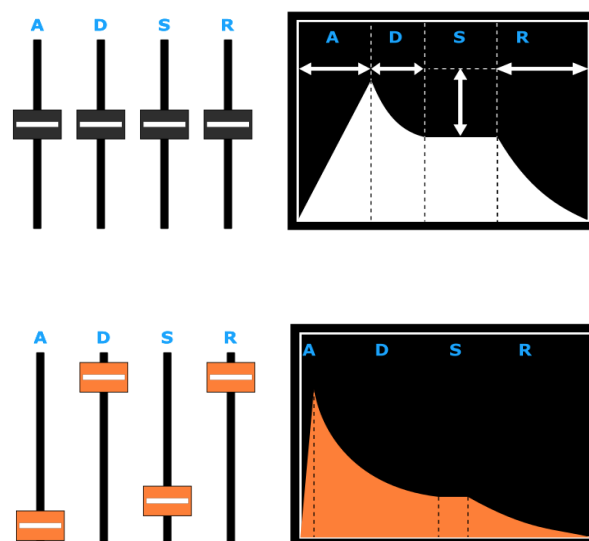

(The voice envelope is shown on the middle-right side of the GR-1 display column.)

## Knob Section

The knob section is a section of 8 single turn potentiometers/knobs. All knobs have their own functionality:




## LFO section

The GR-1 has 2 assignable Low Frequency Oscillators (LFO's). The LFO's can produce 2 different waveforms as modulating signal for different parameters. The controls of the LFO's from top to bottom:


- Frequency: controls the speed of the modulating signal
- Amount: controls the amount of modulation
- Wave: selects the waveform of the modulation signal
- Dest: selects the destination parameter to modulate

(Read more about the LFO controls and options in chapter "LFO".)

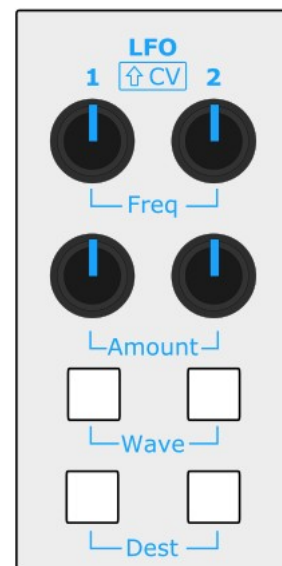

## Presets

The GR-1 is able to store 4 banks of 8 direct accessible preset patches. You can edit, save and load these presets, and copy them.

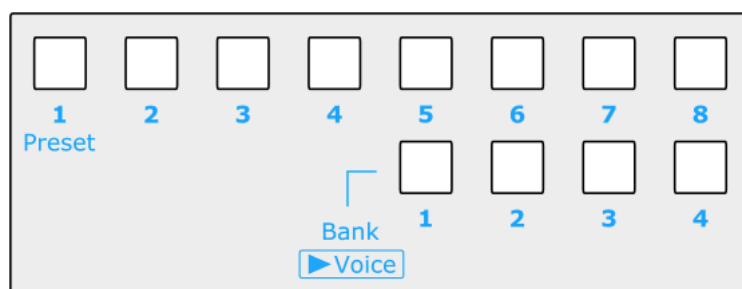


In the figure above, you see that the 8 buttons on top are the presets, the 4 buttons below are the banks. The button of the selected bank/preset will light up. Read chapter “Patches and patch configuration” to learn more about saving, loading and copying presets.

## Menus, and disk access

There are 3 menus the GR-1:

- Sample
- Patch
- Performance

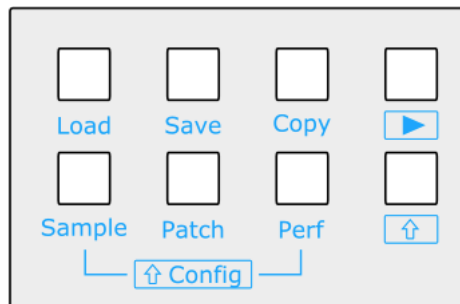

These modes can be selected with the buttons “Sample”, “Patch” and “Perf”(short for Performance).

Let’s first explain what these mean:

- Sample: a sample
- Patch: a sample + knobs and settings
- Performance: 32 patches + 4 multi-timbral configurations

The [Sample], [Patch], and [Perf] buttons determine what type of data you load, with the [Load] button. Each mode also influences the [Copy] button action.

You can copy and paste samples and patches:

1. Press [Sample]
2. Press [Copy]. The GR-1 now remembers which preset’s sample to copy.
3. Switch to another preset using the preset and bank buttons.
4. Press [Copy]. The sample from the first preset is now copied to the current preset.

1. Press [Patch]
2. Press [Copy]. The GR-1 now remembers which preset to copy.
3. Switch to another preset using the preset and bank buttons.
4. Press [Copy]. The first preset is now copied to the current preset.

Since only one performance can be in memory at any time, as an alternative copy function a single patch or patch template can be copied to each preset (a special kind of initialization).

## Play

The GR-1 has a “play” button. The play button triggers voices, and makes it possible to use the GR-1 standalone. The basics of the play function are found in the Quick start chapter in this manual. Note that holding down Shift when pressing play will enter audition mode. The granular engine will be turned off, and just a single sample will play. This is mainly for previewing purposes, but can also be used for musical purposes as modulation and all position controls are also active. Hold the play button for 3 seconds, and it will stop all voices: the emergency engine stop.

## Load, Save and Copy

The GR-1 is able to load, save and copy patches and performances. The load, save and copy functions are explained in different sections of this manual.

## Shift

Holding down the shift button enables to alternative knob and button functions. It is also used to accelerate or fine-tune GUI settings like sliders. There’s also a Direct Shift option in the system menu. Turn this OFF to free up a hand in some use-cases.

## Select knob & Escape button

The “select” knob can be used to scroll through and select from menus. Scrolling is done by rotating/turning the knob. Pressing the select knob activates a menu item. To leave menus and go back to the previous step press “Escape”. Holding down “Shift” while scrolling, increases the scroll speed tenfold.



# Global Overview (Back Panel)

## On/off switch & DC adapter

The DC adapter can be connected to the DC jack input. The on/off switch turns the whole GR-1 on or off.

NOTE: Turning OFF is done by using the Shutdown feature in the System menu. Only after this can you physically switch OFF!

**WARNING: Do not use an adapter other than the one that comes with the GR-1.  
If you insist, please contact us first.**

## MIDI in & thru

Connect MIDI devices to these DIN connectors. See section “MIDI options” for more info about MIDI connectivity and the chapter “MIDI command table” near the end of this manual for the MIDI CC table.

## USB connection

The 4 USB ports offer various options:

- Connect the MIDI output of one or more MIDI devices to one or more of the 4 USB ports to control the GR-1 with MIDI
- Load samples from one or more USB disks/sticks
- Load (copy) and save, presets and performances on one or more USB disks
- Perform firmware updates from a USB disk
- Connect an USB audio interface (class compliant) to record audio on the GR-1.

## CV & Gates


There are 2 CV inputs on the GR-1, which can be routed to different destinations. The gate output provides a gate signal (5V) when the GR-1 receives one or more note-on messages.

## Audio output

The GR-1 outputs high quality, low noise, stereo audio on 2 channels, left [L] and right [R].

## Headphone connection



There is a headphone amplifier on the GR-1. The knob next to the headphone controls the volume.

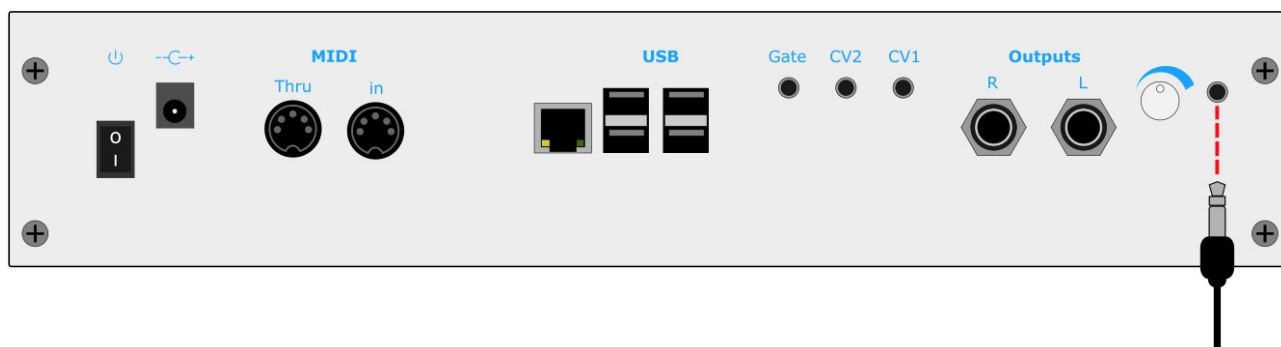

# Granular Controls



## Density

The density parameter controls the amount of grains per second (Hz). The amount can be set between 0.1-1000 grains per second, with a maximum of 128 grains playing simultaneously, per voice.

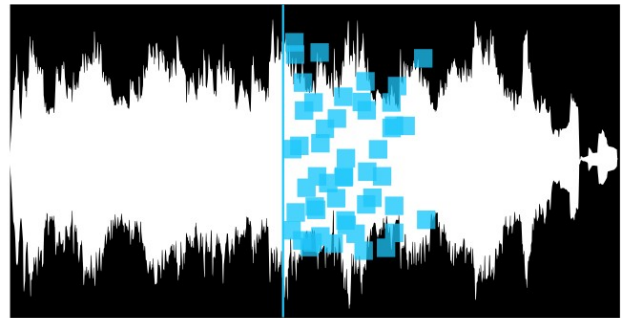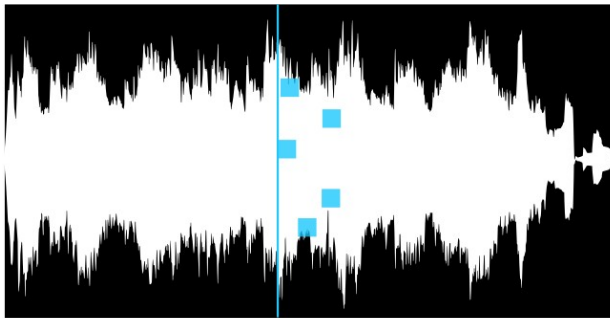


## Grain Size

The grain size parameter controls the playing length of a grain. The length can be set between 5-5000 milliseconds.

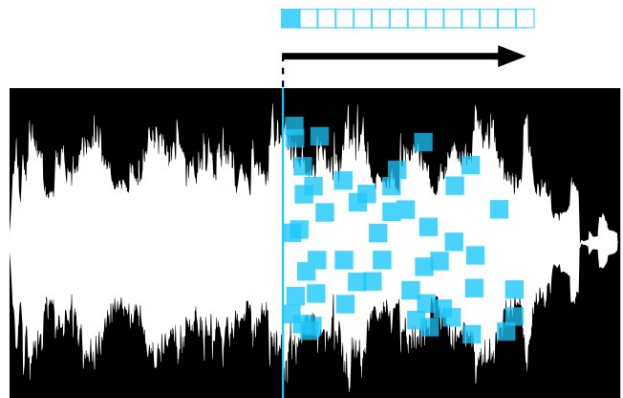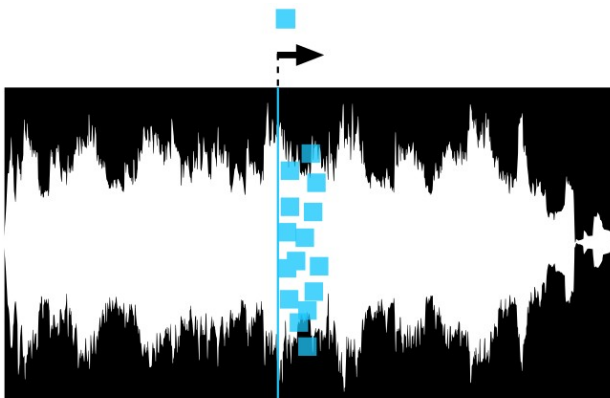


## Spray

The spray parameter controls how much a grain's start position is randomized.

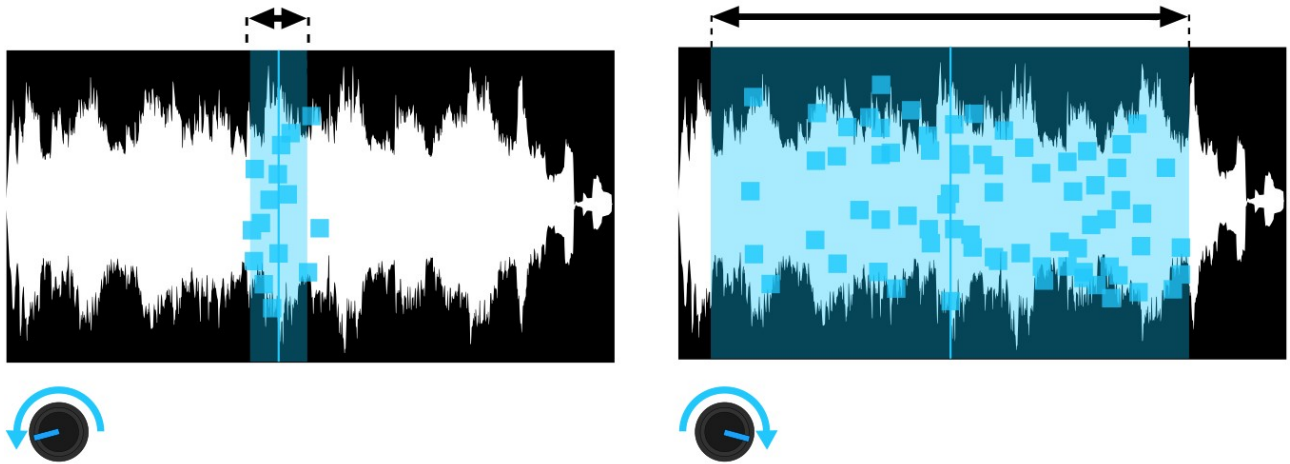


## Pan Spray

The Pan Spray parameter controls how much a grain's stereo panning is randomized. 0 means completely centered. Maximum pan spray means a grain can appear everywhere in the stereo image.

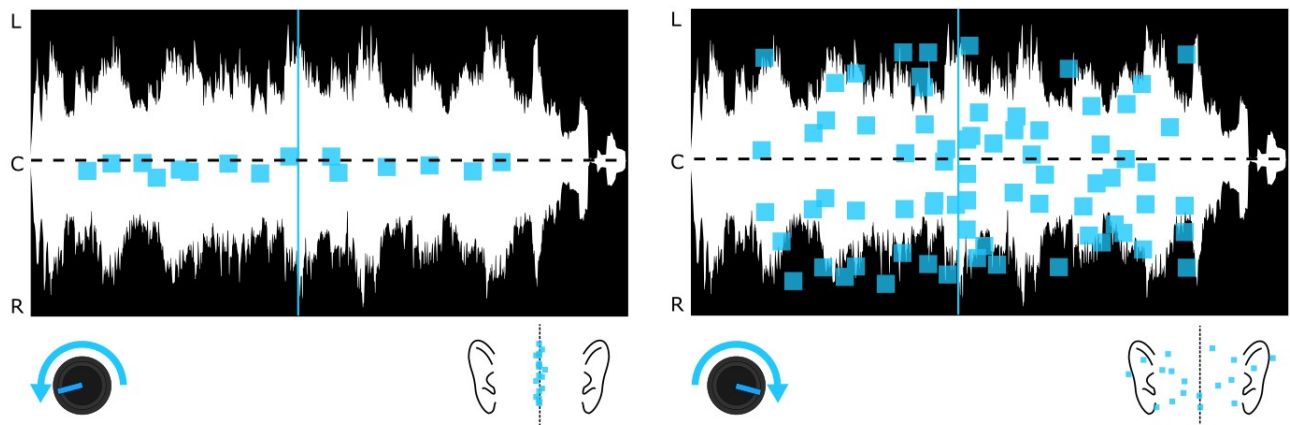


## Panning

Shift+Pan knob: The Panning parameter controls how much a grain is panned to left or right. Can be combined with pan spray.

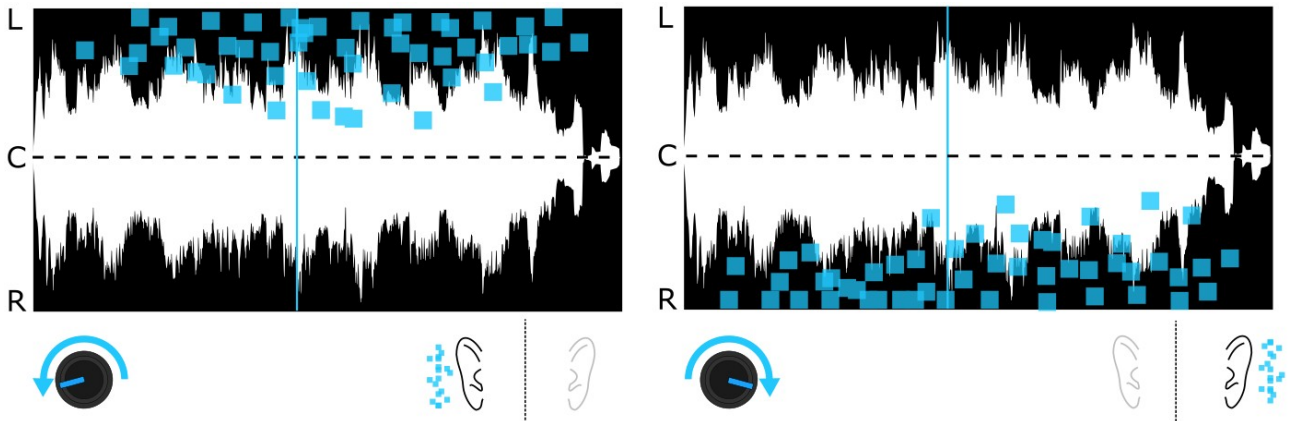




## Scan

The Scan parameter sets the movement speed of the grain start position. It can vary from -2 times (reverse motion) the sample play speed to +2 times (forward motion) the sample speed.

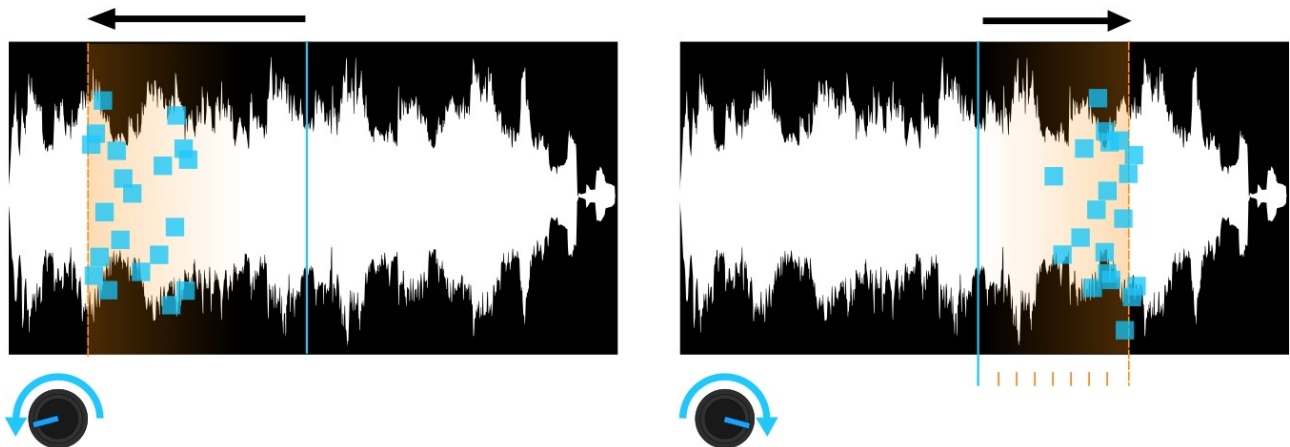

## Direction

Shift+Scan knob: Grains can run in both forward- and reverse directions. Reverse direction can be used for special effect. Combining both can be used to make the sound more lush. Setting the bias completely left plays all grains in reversed direction. Setting the bias completely right plays all grains in forward direction. The center plays in 50/50% in both

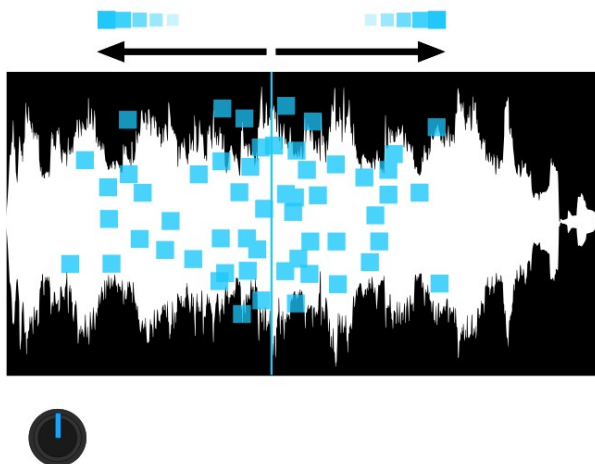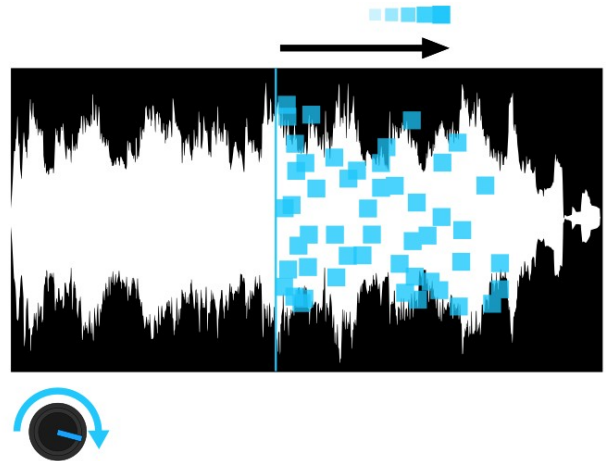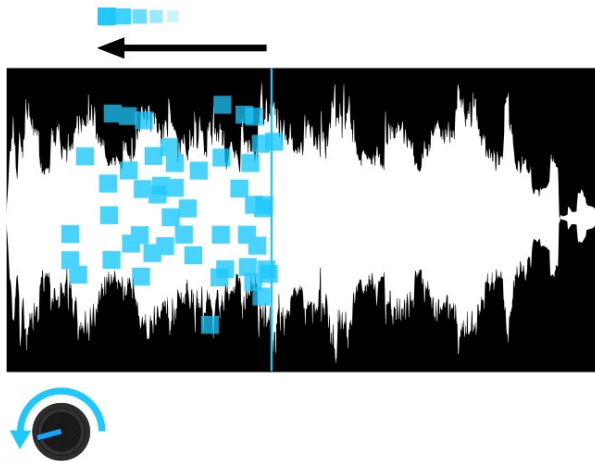


directions

## Tape Mode Controls

In 'Tape Mode' (see Patch Menu) scan and all other position controls will work like expected, but pitch controls are gone. Instead the pitch knob now controls "tape slew". This means the speed at which the tape head catches up with the scan pointer.

## Loop Start & End

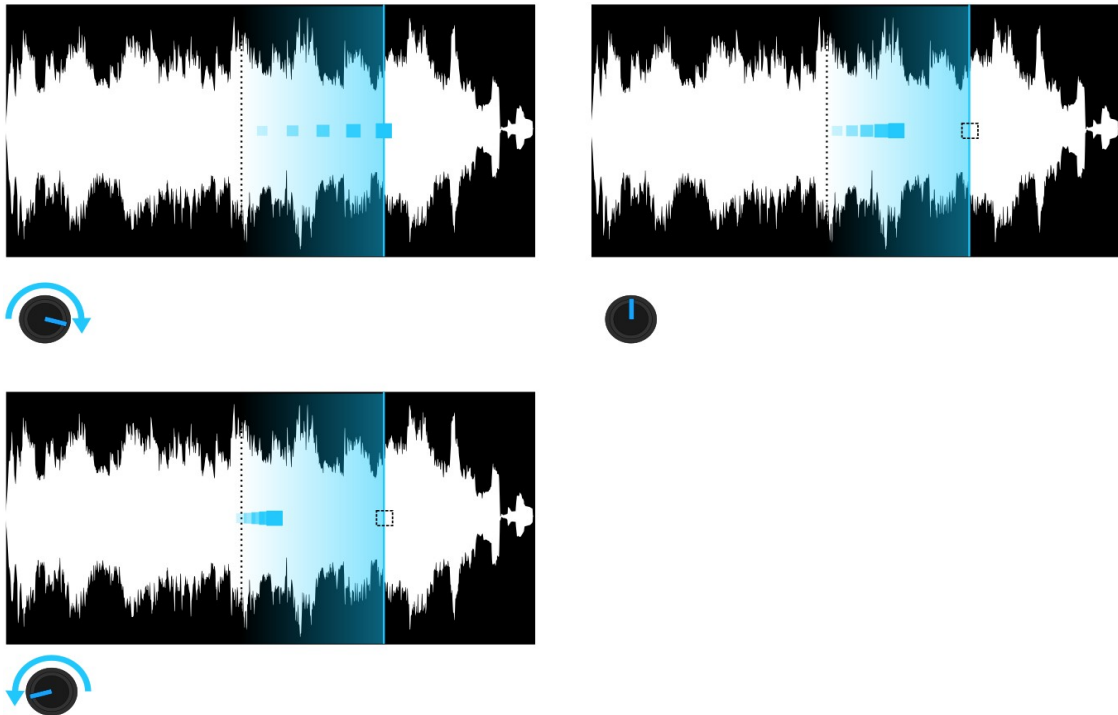


Loop parameters set an area in which the grains wrap around. This can create tight loops which alter pitch perception.

*Set Loop Start: Shift + Sides*

*Set Loop End: Shift + Curves*

*Fine-tune Turn the Select knob directly after setting Loop Start- or Loop End.*

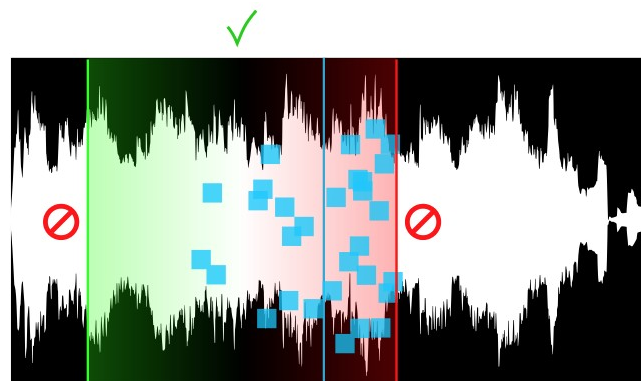


# Low Frequency Oscillators (LFO)

## Rate

LFO frequency ranges from less than 0.0001 Hz (hours!) to 50 Hz, and can be set in 1024 steps using the potentiometers using a cubic curve. The LFO frequency range can be set in the Patch menu under “LFO 1 / 2 max frequency”.

It’s also possible to fine tune LFO frequency by turning Select after you’ve touched the LFO speed knobs.

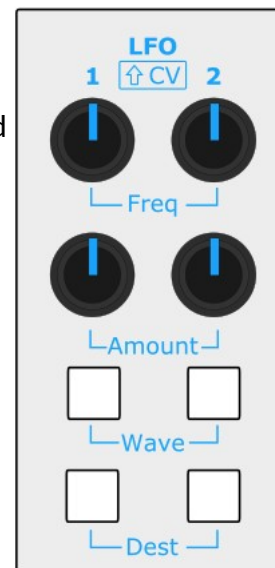

## Waveforms

The GR-1 has 2 assignable Low Frequency Oscillators (LFO's).

The LFO's can produce 5 different waveforms:



*(waveforms from Left to Right)*

- Sine waveform
- Square waveform
- Saw waveform
- Sample & Hold waveform
- AUX waveform

The waveforms can be selected with the “Wave” button. The frequency can be controlled with the “Freq” knob and the amount of modulation can be controlled with the “Amount” knob. The destination to be modulated can be selected with the “Dest” button. Both LFO's are identical.

## Aux LFO waveform

The fifth LFO waveform is called “AUX” or auxiliary. It is a user-defined waveform that can be recorded by using the position slider. By default the AUX waveform is empty. To record it:

1. Press Shift + Wave (1 or 2). The display will indicate that recording is ON.
2. Move the position slider in the movement you want.
3. Press Shift + Wave (1 or 2) again. The display will indicate that recording is OFF.

Recording is done at about 60 Hz. The buffer size is 1024 points. That means you can record about 70 seconds of movement.

Replaying the AUX waveform using the LFO's means you can stretch it out to an hour or compress it to 20 milliseconds. The AUX waveform is interpolated for smooth movement.

A recorded AUX waveform will be stored inside the patch data, **if the patch is saved.**

## Destinations

At the time of writing (firmware 2.1 onwards) there are 11 MOD destinations:

- TUNE (Pitch)
- POS (Sample position)
- SPRAY
- SIZE
- DENS (Density)
- AMP (Amplitude)
- PSPR (Pan spray)
- CUTOFF
- SIDES (Grain window)
- TILT (Grain window)
- CURVE (Grain window)

Tip: When you press either one of the Dest buttons and then turn the Select knob, you'll be able to quickly scroll through the destinations, instead of having to go tap tap tap.

By default the GR-1 operates the LFO's and CV's in one-to-one mode: only one MOD destination per LFO or CV. More advanced users probably want to turn this off. Do this by holding down one of the Dest buttons for a while. They'll now be lit signaling that free matrix mode is enabled.

Normal MOD destinations are updated at 200 Hz. The grain window destinations: sides, tilt, are updated at just 4 Hz, and the window is linearly interpolated between 4 Hz steps at 200 Hz. The GR-1 is massively polyphonic. To enable this, a single shared window that's directly used by all playing grains was required.

See the “patch modulation settings” chapter for extended LFO options.

## **Modulation matrix**

Next to the direct “Dest” button control, there's also a complete modulation matrix in the GR-1's engine. This can be controlled by MIDI CC or via the patch menu. MPE MIDI can also be used for LFO modulation. Using the matrix it's possible to send all modulation sources to all modulation destinations, with flexible modulation depth. But also it's possible to have negative modulation, to invert the LFO waveforms. Only pitch and cutoff are not modulated by MPE. This is because pitch is normally modulated by MIDI's pitch bend, and there's only a single stereo filter at the end of the signal path.

Also see the matrix section in the “Patch Modulation Settings” chapter for more information.

## **MIDI clock synchronization**

This allows the LFO frequency to be synchronized to the MIDI beat clock. Multiplication and division of this clock is also possible. Use the patch menu and enable “LFO1 sync” or “LFO2 sync”. In this mode the multiplier and divider setting may be accessed with the Freq knobs

Knob controls:

Freq 1: LFO1 clock multiplier

Shift + Freq 1: LFO1 clock divider

Freq 2: LFO2 clock multiplier

Shift + Freq 2: LFO2 clock divider



# Control Voltage (CV)

The CV section makes it possible to combine the GR-1 with a modular system (Eurorack for example). The CV section contains 2 control voltage inputs and 1 gate output.

## CV inputs:

CV1 and CV2 accept voltages within the range of 0-5V. The CV inputs are protected for voltages outside of the 0-5V range, but we would still recommend to use them with care. The CV inputs are assignable to different parameters.

The CV is displayed with a mini jack cable icon. On top the CV number is displayed and below the mini jack icon the destination is displayed.

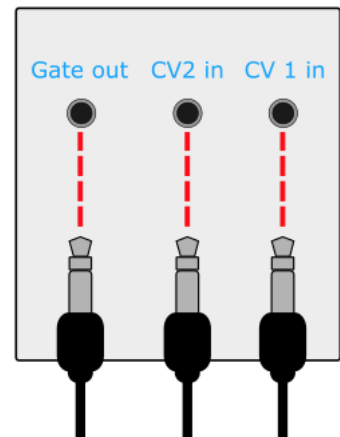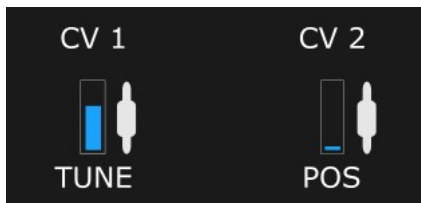

## CV Amount & Destination

To control the CV options, Press the “shift” button, to change the LFO controls to CV controls:

1. LFO amount will now function as CV amount
2. LFO destination will now function as CV destination

Note that the CV inputs are left *floating* when they're unconnected. This means that by default the amount should be turned down to zero, otherwise random modulations may result (!).

(See figure right)

LFO 1 corresponds to CV 1 and LFO 2 to CV 2.


Note: CV inputs have a 0-5V range.

Voltages outside of that range will be clipped.

## Gate output

**Warning: Do not use the gate output as an input!**


The gate output responds to incoming MIDI notes. When one or more notes are played the gate output signal will be "High", 5V, and when notes are released/off the gate output signal will be "Low", 0V.

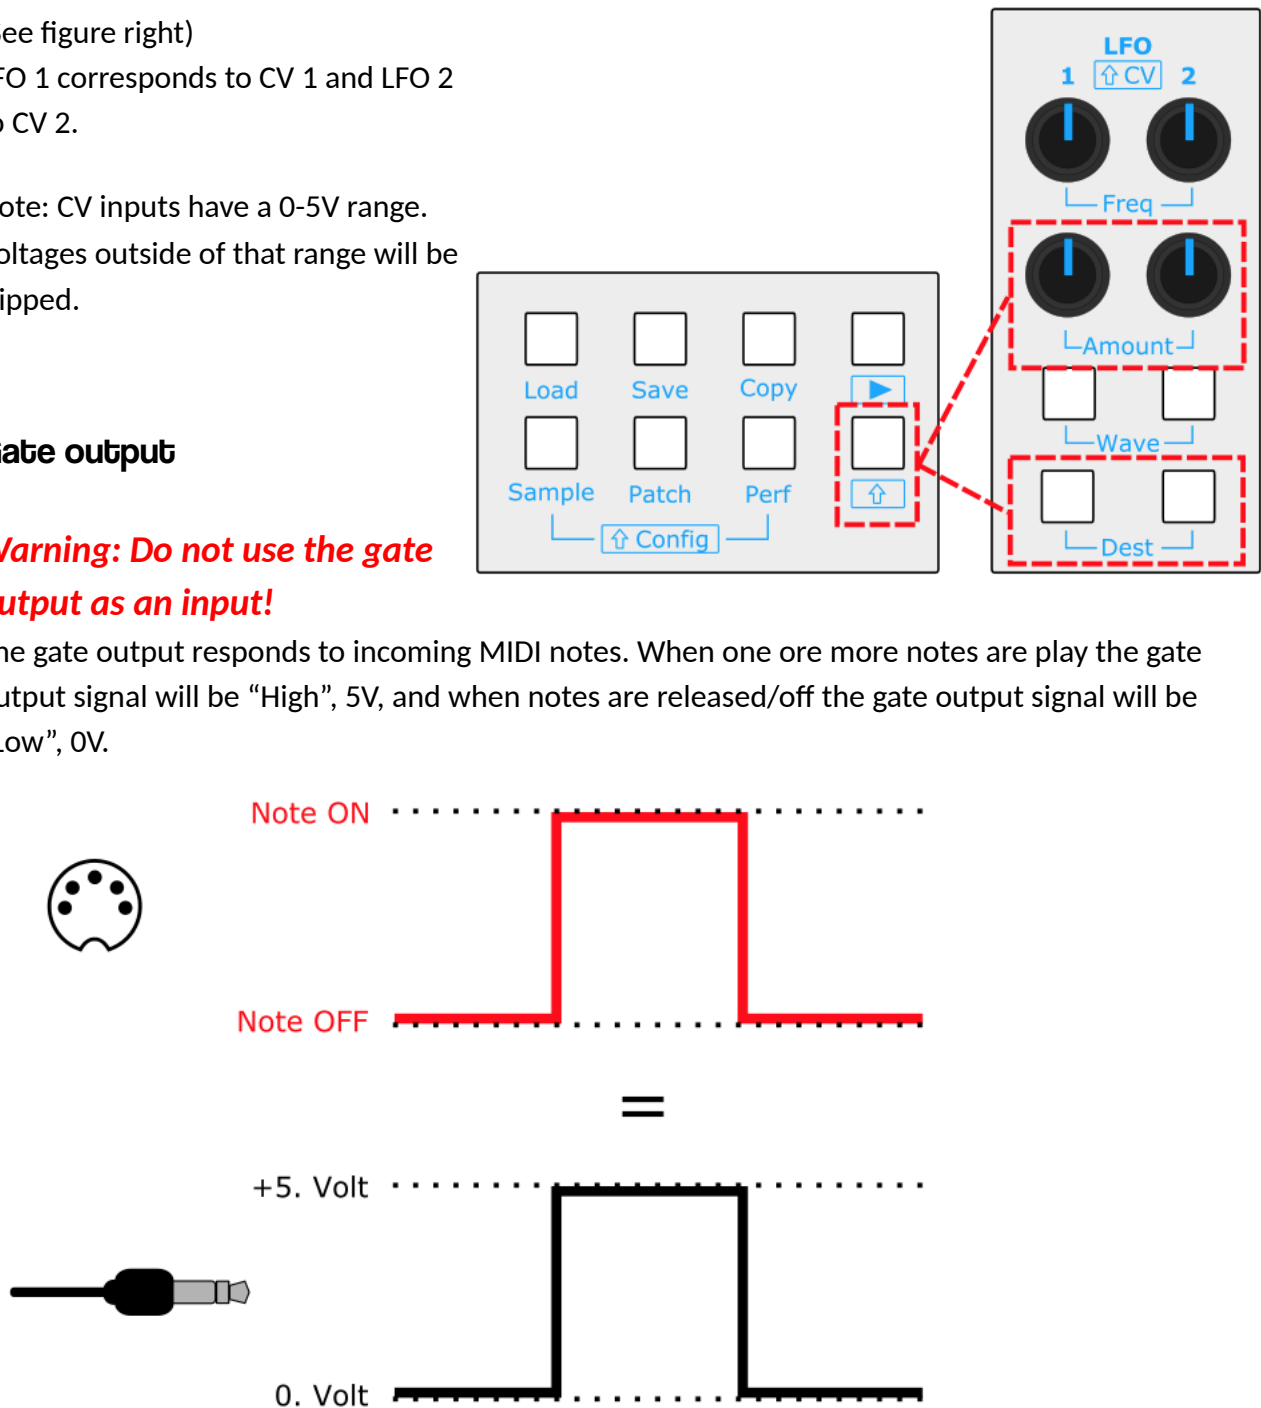

Example patch:

You can run the GR-1 audio through an external (analog) VCF.

Then control the cutoff with an external ADSR, triggered by the gate out of the GR-1.

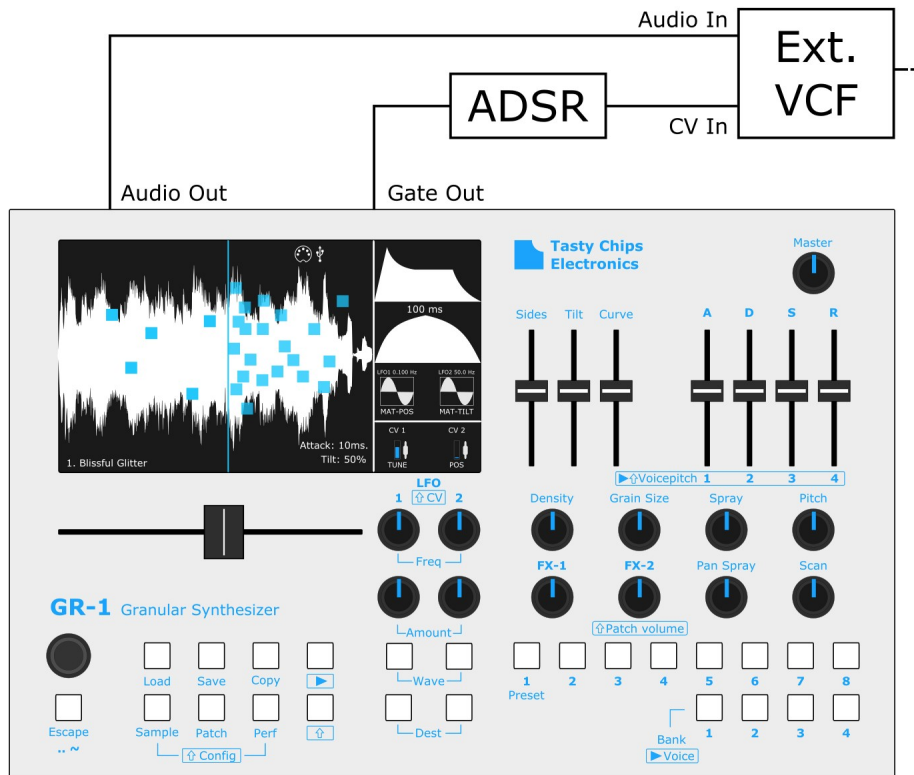

# Basic Tutorials

## Modifying and saving

The previous chapter has given you the basics of the GR-1's physical controls. This means that you can already have a taster of all the presets, and that you are able to tweak them to your liking. Since making your own patches is the first step to getting more out of your synthesizer, this chapter will explain you how to do so.

You may have noticed that tweaks will be gone after switching presets. This is because the GR-1 is designed to not to save *anything* unless you explicitly tell it to do so. A preset is a preset so to say. Even if you can overwrite it, you'll need to tell it to do so. This is a design choice to make the GR-1 suitable for live use: Presets can quickly be restored without having to go into menus to recall them, never actually interrupting the sound.

Let's make a new preset: a modified version of an existing patch. This is also the simplest way to create a new one. We'll copy the existing preset (patch) to a new preset. We'll then tweak it and make it permanent. For this we reserved a bunch of empty presets. Using the bank and preset buttons you can see that banks 3 and 4 are left completely empty, while banks 1 and 2 contain all the presets.

1. Select a preset you want to modify using the preset and bank buttons.
2. Press [Patch].
3. Press [Copy]. This button will now slowly blink indicating it's ready to paste to another preset.
4. Select an empty preset using the bank and preset buttons. For instance bank 3, preset 1. This preset is number 17 in the GR-1's memory. It will show this on the bottom of the display.
5. Press [Copy] again. The blinking will stop and the original patch will be copied into the new preset.
6. Modify some parameters like Density, sample position (using the big horizontal slider), Scan, and others. Use the Play button to hear your tweaks.
7. Press [Save], the Save popup will now \*drumroll\* pop up.
8. Select the data type "Patch".
9. Optionally navigate to enter a name in the "Name" field, and then press [Save] again to save your modified patch.

**CAUTION:** NEVER power down your GR-1 while saving. Data corruption may occur! Wait until the display responds to input again before attempting to power off.

Your modified patch (preset) will now be stored to permanent internal storage.

NOTE: if you first loaded a factory performance (from `/media/internal/factory`) or one from USB, you will be redirected to the performance list to save the performance first to one of the internal user performances.

## From sample to patch

Granular synthesis depends a great deal on the input material. The logical next step is to load your own samples. The previous chapter instructed you how to modify and save presets. We're now going to load a sample from your USB drive to make a new one, with minimal effort. You'll combine the granular parameters from an existing preset with your own sample.

1. Using the preset and bank buttons, find a preset patch you like.
2. Press [Patch].
3. Press [Copy]. This button will now slowly blink indicating it's ready to paste to another preset.
4. Select an empty preset using the bank and preset buttons. For instance bank 3, preset 1. This preset is number 17 in the GR-1's memory. It will show this on the bottom of the display.
5. Press [Copy] again. The blinking will stop and the original patch will be copied into the new preset.
6. Insert your USB stick with samples. The "Load" button will start blinking, indicating mounting is in progress.
7. Press [Load], followed by [Sample]. You will now enter the file chooser screen to pick a sample.
8. Select a sample by navigating with the (Select) knob. Turn it to scroll through files. Push it to enter a folder, and press [Load] to load a selected sample. (If you want to quickly preview the samples see "sound previews" further on.)
9. The GR-1 will return to the main screen and display the waveform of the sample you selected.
10. Use play and the horizontal slider to find sweet spots in the sample, and adjust the granular parameters to your liking.
11. Press [Save], the Save popup will show.
12. Select the data type "Patch", then press [Save] again.

**CAUTION:** NEVER power down your GR-1 while saving. Data corruption may occur! Wait until the display responds to input again before attempting to power off.

Congratulations! You just created your very own patch on the GR-1. May it be the first of many. You can also use a USB sound card with your GR-1 to record your own samples and save them to

presets in a similar way. Please see the “Samples and audio input” chapter on how to realize this.

You can repeat this process, and make multiple tweaked versions of your own patches until banks 3 and 4 have filled up. After this you may be interested to know that you can also load and save entire performances (32 presets + 4 multi timbral configurations). Please see sections “Loading a performance” and “Saving a performance” to find out more.

## **A clean slate**

If you want to start from scratch and make your own performance completely, just use one of the following:

A) initialize the performance in the performance list:

1. Hold [Shift] and press [Perf]. You'll enter the system menu.
2. Then scroll to the Performance tab using the encoder, and push it.
3. Select the performance you want to initialize with the encoder, and push it.
4. Select “Init”, and confirm. “Init & load” is a shortcut to also load the performance you just initialized.

B) “Kill” performance. This really clears everything, even the performance menu settings.

1. Press the [Perf] button.
2. Hold down [Shift].
3. Press [Load].
4. A popup will now show to ask if you want to kill the entire performance.
5. Press [Escape] to cancel or press (Select) to kill it.
6. You’ve now got 32 empty presets. Default patch parameters and short empty samples.

C) Copy a single preset to the rest of performance.

1. Press the [Perf] button.
2. Select the preset you want copied.
3. Press [Copy].
4. A popup will now ask if you want to proceed.
5. Press (Select) to paste this preset to the rest of the performance.

D) Copy a “template”, that is the parameters of a single preset, to the rest of performance.

1. Press the [Perf] button.
2. Select the preset you want copied
3. Hold down [Shift] and press [Copy].
4. A popup will now ask if you want to proceed.

5. You can now load samples into the presets. You'll end up with multiple different samples with the same patch template (=patch parameters).

While A & B allow you to start completely from scratch, C and D allow you to start from patch.

While a pun might not be everyone's cup of tea, it does stick.


What you typically want to do after this is tweak a preset and then save the patch, just like described in the previous tutorials. Methods B, C, and D don't change anything on disk by themselves. You'll need to save the performance. Method A will of course directly overwrite the performance slot.

# MIDI

The GR-1 offers many MIDI control options. For details see the MIDI control table near the end of this manual. The GR-1 supports USB MIDI and DIN MIDI connectivity. There are 2 DIN MIDI connectors on the GR-1, “MIDI in” and “MIDI thru”.

## MIDI in

To control the GR-1 with MIDI, connect the output of the MIDI device to the MIDI or USB input of the GR-1:

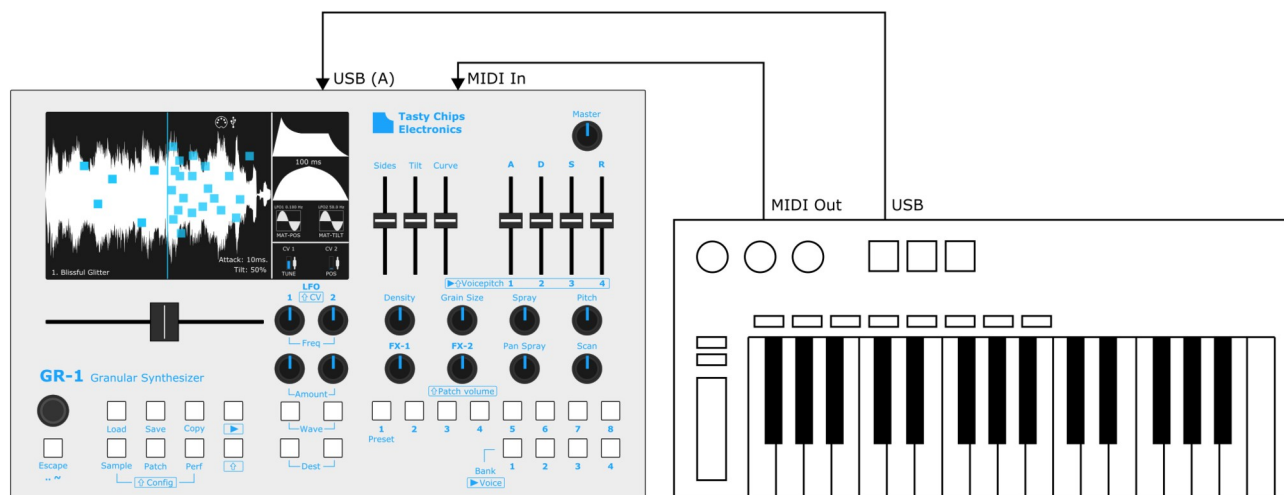

It is possible to directly hook up your DAW via the DIN MIDI IN port. It will support all MIDI data at DIN speed (31 kbps).

MIDI IN offers support for the following MIDI commands:


- Note on/off (11 voice polyphonic, velocity sensitive)
- Pitch bend (bends all played notes in tune)
- Program changes per MIDI channel (changes the preset in each part).
- Controls (cutoff, ADSR times, LFO frequency, etc. can be controlled with MIDI controls)

See MIDI CC table at the back of this manual for the corresponding MIDI channels, CC numbers and more.

MPE MIDI controllers can be enabled in the performance menu. The GR-1 then supports pitch bend, after touch, timbre, and lift velocity, per note.

## MIDI thru

The GR-1 can be chained with other MIDI controlled devices, by simply connecting a MIDI cable from the MIDI thru connector on the GR-1 to the MIDI in of any other synthesizer:

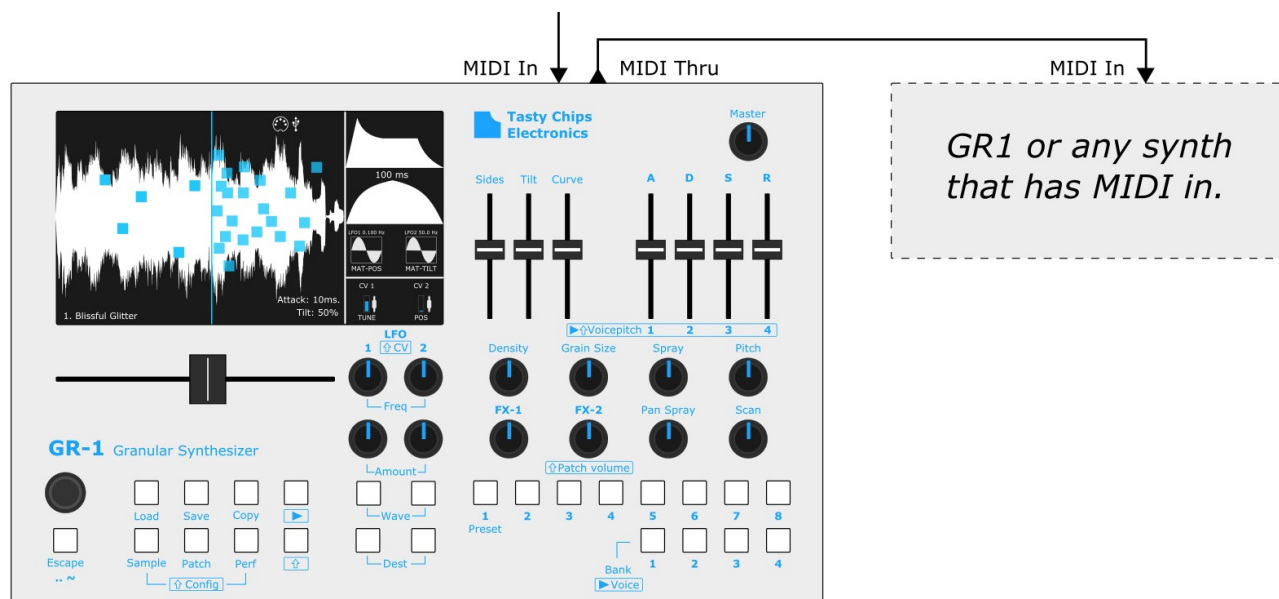

## USB MIDI

The GR-1 supports USB MIDI in host mode. That means it can directly hook up to USB MIDI controllers and keyboards via one of its 4 USB ports. At the time of writing only hooking up a single USB MIDI device is supported. It is possible to use USB MIDI and DIN MIDI at the same time, but please note that both MIDI controllers should be on different MIDI channels.

The GR-1 also supports your DAW via USB, but only via a host-to-host interface. This allows you to set up many hi-resolution automations in parallel, as USB supports a much higher data rate than DIN. Direct USB connection from host (PC/Mac) to your GR-1 is *not* possible as the GR-1 is also a USB host. Please search this manual for host-to-host interface to find out what options exist to realize this.

## MIDI OUT (USB only)

The GR-1 supports MIDI out via USB since firmware 2.4. It will generate CC's when you turn its knobs and when you move its sliders. It can also generate 14 bit precision CC's (NRPN's) if you like. This feature requires a host-to-host interface when you want to use your DAW to receive these messages.

## **Set MIDI channel**

To set the change the MIDI-channel the GR-1 listens to, you will need to enter the configuration screen to do this.

1. Press the “shift” + “Perf” to enter configuration screen
2. Select “MIDI-channel” parameter with the “select” knob (turn & press)
3. Select the desired channel with the “select” knob (turn & press)
4. Press “Escape” button to exit the configuration screen

Turning left completely will turn MIDI off. Note that each of the four parts in the GR-1 has its own assignable MIDI channel. You can set all four at the same time by performing the above, but with the “Shift” button enabled. All available MIDI controls are documented in the chapter “MIDI Control table”.

## **MIDI program changes and banks**

The GR-1 supports MIDI program changes on all of its four parts. For the sake of clarity: the GR-1's notion of preset bank is not the same as a MIDI program bank. A MIDI program bank is 128 presets; a GR-1 bank is only 8. Sending MIDI program change 0, will activate GR-1 preset 1, bank 1. Sending MIDI program change 8 will activate GR-1 preset 1, bank 2, etc. As you can see the GR-1's 4 banks are mapped to the program change range [0..31].

## List Of Tested (USB)MIDI controllers and keyboards


AKAI MPK25  
Alesis Q25  
Arturia Beatstep\*  
Arturia Keystep\*  
Arturia Matrixbrute  
Casio HT-700  
Electra One  
Eowave Ribbon  
Joué board  
Keith McMillen K-Board Pro 4  
Koma Komplex sequencer  
Korg Nanokey Studio  
Korg Nanokontrol2  
Korg Nanopad2  
Midistart 2  
Moog Sub37  
Native Instruments 88S MKII  
Roli Seaboard Block  
Sensel Morph (using the piano keyboard overlay)  
StudioLogic MixFace  
Synthstrom Deluge  
Teenage Engineering OP-1

\*) For proper results with the Arturia controllers you will need to turn off “Transport CC’s” in Arturia’s “MIDI Control Center” program on your PC/Mac.

\*) Needs GR-1 Firmware v1.2 onwards to function properly.

# Audio Input

There is no audio input on the GR-1 itself, but it can record audio using a USB class compliant audio interface: either a separate box or a dongle.

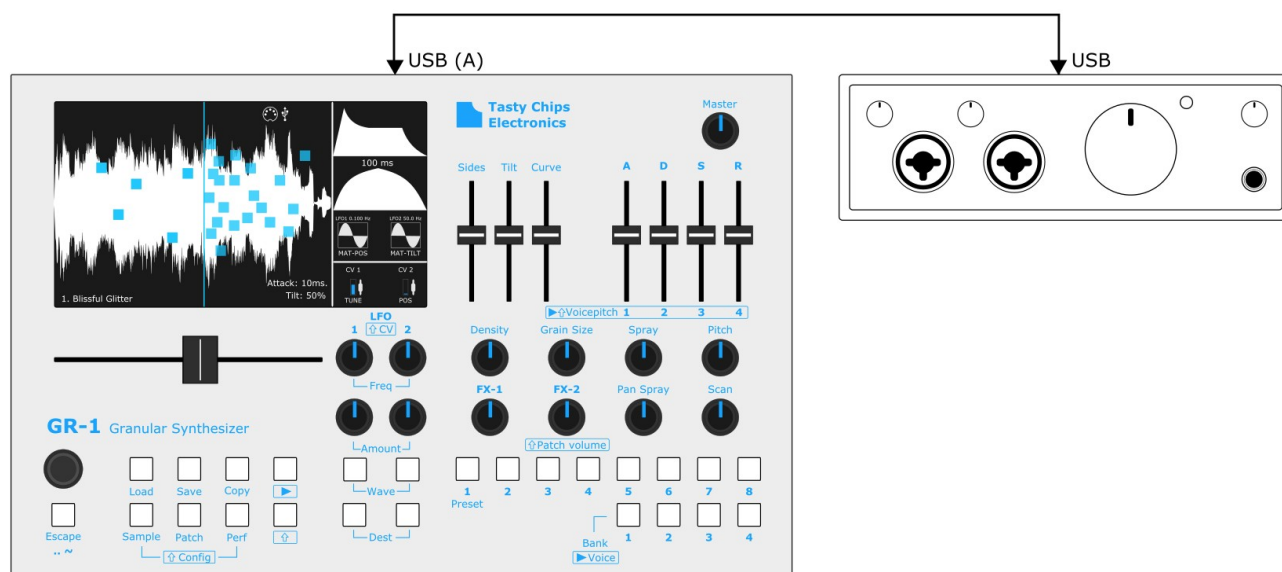

## Configuration

To enter the Sample configuration, press “Shift” and then “Sample”. The configuration parameters can be set with the select knob. Leave this configurations screen with “Escape”. In the top you can see the detected audio interface / sound card. Default it will read:

“Sound card [None found]”. When one is plugged in it should detect it within a second or two:

“Sound card [BizBaz Audio Frobnicator]”

## Rec level

This is a meter and a level controls rolled in one. It shows you the audio input level as it would be used in recording to sample. You can use the slider or Select knob to adjust the level. There’s 6 dB headroom at the end, indicated by a thin vertical line. The meter is normally **blue**, and becomes **orange** when the signal power is within the 6 dB headroom, and **red** when it physically clips. The meter’s movement is close to that of a PPM meter.

## Monitor level

This sets the monitoring level. The audio input is attenuated using this level and is directly mixed into the synthesizer engine output. This can of course be monitor your input without additional hardware, but it can also be used as a Dry control when the GR-1 is used as a granulating effects unit. NOTE: Stereo audio input is down mixed to mono. The monitoring signal as such, is also mono.

## Looping rec

With “looping rec” turned off, the recording of the sample will be a one shot recording. Turn “looping rec” on to do continuous recording/real-time processing.

## Record start mode

You can turn on the ability to record here and select the start point for recording. The following start points are available:

- **Current position:** When pausing the recording, recording will start from that same point when activated again
- **Wiper:** Recording starts from the sample position, when activated
- **Start:** Recording starts from 0.0s, when activated

## Sample size

The sample size or “recording duration” (in seconds) can be set here. This will take effect immediately. If you did this accidentally, press this preset’s button to undo all unsaved changes to sample and/or patch. Note that resizing only works when *not recording*! This is a design choice, because the GR-1 has no way to know where to record in the buffer once it has resized to something smaller.

## Clear sample

Select and push (used to be Select and turn in firmware versions < 1.5) to create a new sample with the number of seconds set with “Sample size”. If you did this accidentally, press this preset’s button to undo all unsaved changes to sample and/or patch. You can also use [Shift] + [Load] when the [Sample] button is lit to do this.

## Recording samples

To start sampling first see to it that you’ve used the sampling menu described above, and make sure you enabled sampling start position. You can turn on “looping rec” as well if you want to use the GR-1 for live sampling and replay simultaneously. It will then keep looping through its sample buffer until the user manually stops it (press Select).

Hook up your USB sound card and connect it to a sound source.

Now make sure you’re in the main screen and then press Select. A red wiper should appear and should start running forward. If it stays still, then re-plug the USB cable. The GR-1 will now record the incoming sound into the buffer. Sampling is done at 44.1 kHz, 16 bit, mono. Multi-channel sources are converted back to mono.

You can use the play button and scan knob to play through the buffer at different speeds, even backwards. All on play mode functions are available. Including the on-board chord buttons and sliders. All granular parameters and synthesizer parameters are also directly controllable while playing the recording sounds.

To stop recording, press Select once more.

## Supported USB sound cards

Any class-compliant audio interface / card should work, but some are definitely better than others. Part of this list was provided by us and tested in-house, but the largest part was provided by our user community. If you have an interface that works, please let us know and we'll add it here!

A rule of thumb is, the cheaper and smaller the audio interface, the better the odds of it working properly. The more expensive interfaces do have better signal-to-noise ratio, however. Your mileage may vary.

In-house tested audio interfaces. These work 100% guaranteed:

- Behringer UCA222 \*
- Behringer UFO202 (some white noise) \*
- Behringer UM2 (please use the XLR input, it needs the mic pre-amp!) \*
- Cakewalk (Roland) UA-25EX (please turn ADVANCED MODE switch OFF)
- Delock USB Sound Adapter 7.1
- EWENT EW3751, USB Audio Adapter 5.1
- Focusrite Scarlett 2i2
- Sweex USB Sound Card Adapter
- Terratec Aureon USB Mini

Interfaces tested by our users. This means they will be detected by the GR-1, and will give audio input, but since we haven't tested them ourselves, a possibility of crackles or low input volume remains. Note that the general rule-of-thumb is that smaller and cheaper interfaces tend to work crackle-free:

- ALTO 1604
- Audio Damage ODIO (Eurorack)
- Behringer Line2USB \*
- Boss SY 300
- BOSS SY-1000 guitar synth
- Centrance Mixerface R4
- DeLock USB 2.0 Sound Adapter
- Elektron Digitakt
- Elektron Digitone (NOTE: Some users say it works fine, but others say it doesn't)
- EVO4
- Focusrite Scarlett Solo (including V3)

- Focusrite Scarlett 18i8
- Logitech H390 Wired Headset
- MixPre-6 II
- MiniDSP USBStreamer (ADAT, TOSLink -> USB)
- Plugable USB Audio Adapter
- Presonus Studio 68c
- Rocksmith guitar cable
- Roland SP-404 mk2
- Roland VT-4
- SSL Connex
- Soundcraft Signature 12
- Tascam DR-05X
- T bone USB 1G
- Terratec Aureon 5.1 USB
- Universal Audio Volt 4
- Universal Audio Volt 276
- Vochela Doubler mic
- Zoom R16
- Zoom R24

\*) Behringers seem to provide the Left channel instead of L+R mix.

These work, but have issues with periodic plops and crackles:

- Apogee Jam
- Apogee Mic 96k
- Audient ID4
- Elektron Analog Heat (periodic bursts of aliasing reported)
- Roland UA-1EX
- Sound Blaster Play!3
- Zoom field recorders; H1N, H2, H4, H5, H6\*

\*) Zoom H-series field recorders: We have tested the H4NPro ourselves. It works, but it has crackles. Several users have pointed out that other H-series models work, but also suffer from periodic crackles!

The official Raspberry Pi USB driver software causes these crackles. There's not much we can do about it.

These are power hungry and cause the GR-1 to black out: You have been warned!

- Allen and Heath mixer ZED 10 FX

- NI Komplete (KA2, maybe also KA1)

Unsupported:

- MOTU Track16

If a sound card is not “USB Audio class compliant”, and requires a special driver for it to work on Windows, Mac, or Linux, then it is not supported by the GR-1. There are no plans for adding support for non-class compliant USB sound cards, as all of them have highly specific driver software making it impossible for us to maintain in the future.

# Importing Samples from external drives

The GR-1 can load samples in different formats from the internal or external (USB) memory.

## Sample Formats


The GR-1 can handle different audio formats and quality, with a maximum of 10 MB (about 2 minutes long). The samples will internally be converted to 44.1KHz 16 bit, mono. The following formats are accepted:

- .wav
- .ogg
- .flac
- .aiff (However, some .aiff -C files are not supported. Some companies create compressed .aiff files to keep these files exclusive for their own use.)
- .avr
- .XI

## Loading samples

To load a sample, follow the next steps:

1. Press the [Load] button, a data type selection dialog will show

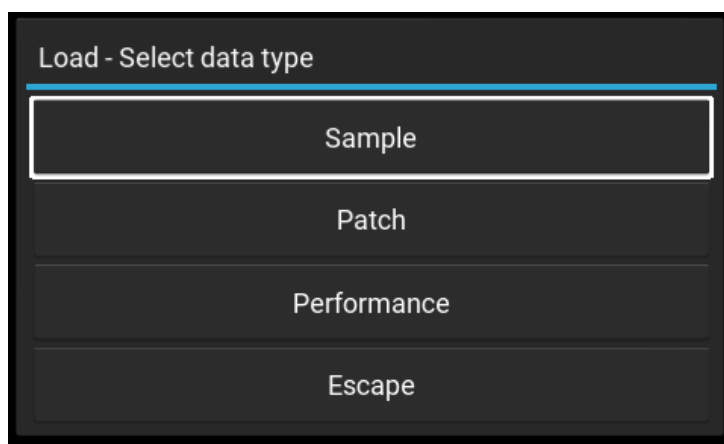

2. Press the [Sample] to select the sample type, and press (Select) or [Load], you will now enter a menu that looks like the figure below..
3. Select the desired sample directory with the (Select) knob (turn and press the knob)
4. Select the desired sample with the (Select) knob (turn and press the knob) or press [Load].

To **cancel** sample loading and exit the menu press the [Escape] button. The Escape button can also be used to cancel opening a big folder, which would otherwise take a long time.

Since the file chooser displays a summary of folder contents in the right column you can choose to load a folder of samples also. Just select the folder and press “Load”.

Note that samples can be played, or previewed in the file selector. For this you’ll need to turn on “Sample previews” in the performance menu.



## Copy samples

To copy sample to another preset, follow the next steps:

1. Press the [Sample] button to enter sample mode, this button will now light up.
2. Press the [Copy] button, the copy button will now blink.
3. Switch to the desired preset using the bank and preset buttons.
4. Press the [Copy] button again, the copy button will now stop blinking.

To **cancel** after step 2, simply press the “Escape” button.

NOTE: the patch or performance should be explicitly saved for the changes to the destination preset to take effect!

It is possible to record and process (real time) incoming audio. Recorded audio can be saved as a sample.

## Saving samples

To save your sample, follow the next steps:

1. Press the [Save] button. The Save popup will show.
2. Select the data type “Sample”, if not already selected.

3. Enter a name in the name field using the (Select) knob. Or use a USB computer keyboard. See the “Naming” section below.
4. Press [Save] again. The file chooser will now show.
5. Navigate the desired folder by turning the (Select) knob, and enter folders by pressing (Select). You can navigate to an internal user directory, or to a folder on your USB stick.
6. Press [Save].

To **cancel** anytime after step 2, simply press the “Escape” button.

**CAUTION:** NEVER power down your GR-1 while saving. Data corruption may occur!

Note that if you’re working in an external or factory performance, you’ll first be prompted to save the performance to a slot, before you can save anything else. This is done to guarantee consistency between what you see and hear what’s permanently stored.

## Naming

0. The default name will show in the text box
1. Turn (Select) to choose a character in the name with the red cursor
2. Push (Select) to edit that character. It will now turn blue to indicate edit mode.
3. Turn to scroll through the alphabet and numbers.
4. Push the selected alphanumeric character and go back to character selection mode. Hold down Shift to get capitals.
5. Repeat steps 1..4 until you have written your name.
6. Press [Save] to confirm you want to use this name.

Of course you can also hook up a USB PC (QWERTY) keyboard to make things easier. The keyboard needs to be plugged in before powering on.

**NOTE:** if you want to remove your USB stick or drives you can press [Shift] + (Select) on a USB drive in the file chooser. It will be cleanly unmounted, and then can be removed without risking data corruption.

# Sample Tuning

Samples may not be tuned to the C key. The GR-1 has two ways to tune a sample to the matching note:

- *Analog*, manually using direct on-board controls and your ears.
- *Digital*, using your MIDI keyboard. Most people used to DAW systems will like to get started this way.

## *Analog:*

For this the (Pitch) knob can be used. It can be tuned one complete octave down or up. To make the tuning process easier, holding down the [Escape] button for a couple of seconds activates a tuning sine wave, and the button should light up. Adjust the tuning to match the pitch of the sine wave. Hold down the escape again and the tuning sine wave should deactivate. Note that the tuning sine wave replaces the sub-oscillator, should it be on.

The Pitch knob has a resolution of a couple of cents, because it spans two whole octaves in total. If you want to fine tune down to the last cent, turn the Select knob directly after having turned the Pitch knob.

## *Digital:*

1. Enter the patch menu with [Shift] + [Patch]
2. Scroll to "Keyboard tuning"
3. Hit the matching note on the MIDI keyboard

Note that both ways may be employed in parallel. This can be confusing, but the analog way allows to set pitch in cents, while the digital way doesn't. Since firmware 2.2 this combination is visualized when turning the pitch knob.

# Patch Load & Save

When you are tweaking knobs and pressing buttons you are making a “patch”.

You can save, load and copy a patch. A performance consists of 4 banks of 8 presets that are directly accessible. The presets may be overwritten with your own tweaks or even with new patches.

## Saving a patch

To save your patch as a preset, follow the next steps:

1. Press the [Save] button. The Save popup will show.



| SAVE - WHAT & WHERE |               |
|---------------------|---------------|
| TYPE                | PATCH         |
| SLOT                | 1             |
| STORED NAME         | SynthShot5(C) |
| NAME                | SynthShot5(C) |
| SAVE                |               |
| ESCAPE              |               |

2. Select data type “Patch” if not already selected.
3. Name the patch if you like. See manual section “Naming”.
4. Press [Save]

To **cancel** anytime, simply press the “Escape” button twice.

Note that if you’re working in an external or factory performance, you’ll first be prompted to save the performance to a slot, before you can save anything else. This is done to guarantee consistency between what you see and hear what’s permanently stored.

## Naming

0. The default name will show in the text box
1. Turn (Select) to choose a character in the name with the red cursor
2. Push (Select) to edit that character. It will now turn blue to indicate edit mode.

3. Turn to scroll through the alphabet and numbers.
4. Push the selected alphanumeric character and go back to character selection mode. Hold down Shift to get capitals.
5. Repeat steps 1..4 until you have written your name.
6. Press [Save] to confirm you want to use this name.

The patch is now saved to your current working (internal) performance slot. If you just loaded a USB or factory performance, then you'll be redirected to the performance list, to first save your performance as an internal user performance.

Of course you can also hook up a USB PC (QWERTY) keyboard to make naming files easier. The keyboard needs to be plugged in before powering on.

Should you want to write patches to your USB stick, or backup your patches, then please use the File manager (System menu → Files), or use the LAN port to use network file sharing to backup your files.

**CAUTION:** NEVER power down your GR-1 while saving. Data corruption may occur! Wait until the display responds to input again before attempting to power down.


## Incremental patch saves

These were possible in firmware 2.8, but since 3.0 these are no longer supported as a questionnaire among our users concluded that this feature was barely used. Furthermore users said they prefer to have as little clutter as possible with regards to saving.

## Loading a patch

To load a patch, follow the next steps:

1. Select the preset to load the desired patch on, using the bank and preset buttons.
2. Press the [Load] button. The type selection dialog will now show.

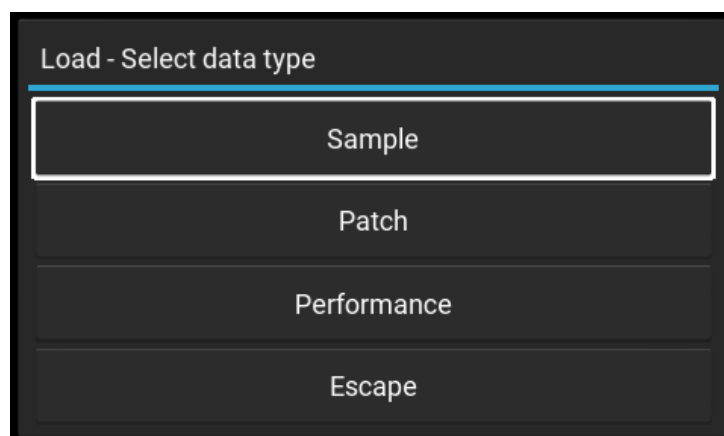

3. Press the [Patch] button if the type was not already selected, and push (Select).
4. Navigate to the desired patch folder with the (Select) knob. The file chooser will annotate it with "PATCH" in the right column, and press [Load].

| PERFORMANCE                                         | SYSTEM | FILES   |
|-----------------------------------------------------|--------|---------|
| FILE MANAGER /media/usb/Kingston_DataTraveler_3.0_1 |        |         |
| *New folder                                         |        |         |
| > [ UP ]                                            |        |         |
| > 001/                                              |        |         |
| > 014/                                              |        | PATCH   |
| > Blinders/                                         |        | SAMPLES |
| > Elevator/                                         |        | SAMPLES |
| > Filterbank/                                       |        | SAMPLES |
| > FoleySound/                                       |        | SAMPLES |
| > FX-IR/                                            |        | SAMPLES |
| > Glass door/                                       |        | SAMPLES |
| > Glass Jar/                                        |        | SAMPLES |
| > GR-Mega Samples/                                  |        |         |

To **cancel**, simply press the [Escape] button.

The name of the loaded patch should now be displayed on the screen. The newly loaded patch is now a preset during this session and may be recalled at your desire by pressing the combination of bank and preset button you selected earlier on.

Note that this applies until the next performance load or reboot. If you wish to store the preset as a part of this performance, you need to explicitly save the patch.

## Copy a patch

To copy the current patch to another preset, follow the next steps:

1. Press the [Patch] button to enter "patch mode". This button will now light up.
2. Press the [Copy] button. The [Copy] button will now start blinking.
3. Select the preset to copy the desired patch to, using the bank and preset buttons.

4. Press the [Copy] button. The source preset data is now displayed on screen.

To **cancel** after step 2, simply press the [Escape] button.

NOTE: the patch or performance should be explicitly saved for the changes to the destination preset to take effect!

## **Kill a preset**

This clears the currently shown preset. It doesn't modify anything on disk if you don't choose to save afterwards.

1. Press the [Patch] button.
2. Hold down [Shift].
3. Press [Load].
4. A popup will now show to ask if you want to kill the preset.
5. Press [Escape] to cancel or press (Select) to kill it.

## **Patch volume**

The patch volume is very useful when it comes to matching volumes of different patches for a (live) performance. The patch volume can be controlled with the "FX-2" knob when the shift button is lit.

# Patch Configuration Menu

## Patch configuration

Press “shift” and then “patch” to enter the “patch configuration” screen. You scroll through the menu by turning the Select knob. Hold shift to speed up scrolling, because this menu is quite long.

## Patch Global Settings

### Name

This allows you to set the name of the preset. This is done character-by-character using the Select knob, or when you connect a computer keyboard, with the keyboard. Turn the Select knob to choose a character to edit. Push to edit. Then turn it to scroll through the letters and numbers. This name will now be used in patch saves. Hold down the GR-1’s Shift button to get capital letters.

### Sample mode

This toggles between three modes:

1. Granular: the default playback mode of the GR-1.
2. Audition: just play the sample. It can be pitched like in granular mode. This is useful for previewing sounds, but can also be used for musical purposes since later versions of the v2.1 firmware.
3. Tape mode: Emulates a play head moving over the sample using the “Scan” knob. Use the “Pitch” to set tape slew: how quickly the head picks up movement. Full position modulation and scan looping are supported.

You can always override the sample mode of the current patch with Shift+Play. Pressing play again without shift, will disable the override, and turn it back to the configured sample mode you configured in the menu.

### Spawn mode

This tells the granular engine how to spawn grains when a new note is triggered. There are four options:

1. Gradual: gradually generate grains based on the configured clock
2. Direct: Generate a full cloud as if the granular engine had been running continuously in the background.
3. Direct reset: This does the same as direct mode, but with all grains starting within the spray area. This will boost the bass and the volume of the voice.
4. Recycle: Re-use old grains. This can give silly effects.

Only applies to granular sample mode. Technical note: spawn mode is a consequence of the energy / CPU saving properties of the engine. When a voice is not playing for a while, the granular scheduler is disabled.

### **Grain stealing threshold**

Grain stealing kicks in when the 128 grains per voice are used up. The GR-1's grain stealing is intelligent and results in no crackles or clicks whatsoever. Leave this at 0 to disable grain stealing. This is the default from firmware 2.2 and before. With a high combination of density and grain size the grain scheduler will start oscillating. When the slider is set higher than 0.0 it will gradually start stealing grains. The higher the setting, the more aggressively the stealing will be. This will result in shorter grains, but the grains spread will be quite homogeneous. And the way in which this occurs is quite intuitive and natural.

### **Keyboard tuning**

If your sample is not in the C key, you can easily tune it:

Scroll to this option to highlight it, and then hit the matching note on the MIDI keyboard.

### **Grain Key Sync**

When this is on, a grain will trigger directly when a note is played. When this is off the grains sequencing is independent from note triggers.

### **Grain Clock Sync**

Turn this on to synchronize the density parameter (the rate at which grains spawn) to the incoming MIDI clock. In this mode the Density knob is used to set multiplier and divider (with Shift pressed).

### **Sample loop confinement**

Turn this on to limit playing of the sample, in both audition/sample and granular mode, to the area defined by the loop start and loop end controls (see below).

### **Resample anti-aliasing**

When this setting is "ON" an anti-aliasing filter will be turned on. This can reduce the amount of voices/polyphony, but increases the audio quality.

### **Granular glide**

Normally the grains that are playing will play until the end of the set "grain size" at the same note pitch of the note that was played when the grain started playing. When the Granular glide setting is "OFF" the grains will be tuned to the notes that are played at that very moment.

If you want the grains to follow the played pitch immediately turn this setting “OFF”. If you have longer grains and want to have a granular-chorus like function that glides between notes. Turn it “ON”.

This feature can also be used to create a swarm like sound where all grains have a different pitch. Just try to wiggle the “Pitch” knob, or use an LFO to modulate TUNE. Set the LFO speed high enough and you’ll get a swarm-like chorus effect. LFO amount can add additional dramatic effect.

## Patch Scan Settings

### Scan Key Sync

The scanning (scan) through the sample can be synced to a voice trigger/note-on event. When “Scan Key Sync” is “On”, the scan position will reset to the “Play position” on every voice trigger/note-on event. “Legato” will only reset the play position on the first note played.

### Scan loop confinement

Turn this on to confine the scanning to the loop area. The loop area is set up with the loop start and loop end controls. When this is off, the entire sample will be scanned through. Note if you have this on, it’s best to disable the option “Sample loop confinement”. Otherwise grains will wrap around this area, mostly resulting in clicks and plops.

### Scan mode

The GR-1 scanning movement has three modes:

- Loop
- One shot
- Ping pong

The scan knob influences speed and direction of all these modes.

### Scan clock sync

Turn this on to synchronize the scan movement speed to the incoming MIDI clock. In this mode the scan knob is used to set multiplier and divider (with Shift pressed).

## Patch Play Mode Settings

### Responds to play

Toggle this to make this patch responsive to play mode or not. Sometimes it’s useful to make a patch exclusively responsive to a MIDI, while other patches are exclusively responsive to play mode.

**Slider root note**

This is the base note for play mode. When changing this, turn play off and on again to take effect. C-5 is the native sample replay frequency.

**Range**

This sets the pitch range of the voice sliders in semitones. For example, if the root note would be C-4, and we'd have a range of 24 semitones, the top of the range would be C-6.

**Free scale**

When in play mode, turn this on to allow free sliding pitch: no semitones. Turn it off to enable division of the octave into the scale defined below.

**Play scale**

When using the sliders to pitch, choose which notes to enable or disable in the octave. This allows the playing of custom scales.

# Patch FX settings

## FX type

The GR-1 has several built-in effects:

- Delay
- Distortion
- Reducer
- Reverb

Only one of these can be active at a time. However, the sub-oscillator and filter can run merrily alongside the chosen effect.

## FX mapping

There are 2 FX knobs on the GR-1: FX1 and FX2. You can map these to the effects, but also to the sub-oscillator and the filter. See the table below for which functions FX1,2 represent when an effect is selected:

| Filter ( <i>default</i> ) | Frequency [0Hz..20kHz]           | Resonance             |
|---------------------------|----------------------------------|-----------------------|
| Sub-oscillator            | Freq [-2 octaves .. fundamental] | Amplitude             |
| Delay                     | Time                             | Feedback              |
| Distortion                | Filter cutoff frequency          | Distortion            |
| Reducer                   | Bit reduction                    | Sample rate Reduction |
| Reverb                    | Time                             | Amount                |

Note: if you have mapped an effect (not the filter), you should also change your FX type to this same effect. Otherwise, the knobs will have no effect on the sound!

As you can see the filter and sub-oscillator can also be mapped to the FX knobs. A typical first use of an effect requires you to first configure the filter cutoff and resonance (these are the default mappings of the FX knobs!). The next step is to pick the FX type of your choice, which activates that effect, and then to set FX mapping to the same effect.

## Filter mode

You select the filter's mode here: LPF (Low-pass), BPF (Band-pass), HPF (High-pass), or NONE.

## Sub-oscillator

This toggles the sub-oscillator on and off. It can be used to add an extra fundamental to your voice. The sub-oscillator is polyphonic with the correct FX mapping you can control frequency (from -2 octaves to -0) and amplitude with FX1, and FX2, respectively.

## **Sub-osc balance**

When playing polyphonically, using the sub-oscillator may create a chaotic effect. You can adjust this balance to a lower number to focus more on the bass side of things. It's also possible to focus more on the treble by increasing this number.

# **Patch Modulation Settings**

## **LFO2->Delay sync**

Toggle this on to enable the LFO2 period to determine the delay period.

## **Cubic LFO amount curve**

Toggle between cubic and linear curve for the LFO amount knobs. Cubic mode is useful for vibrato, for instance. This also affects the data entry in the modulation matrix.

## **LFO 1 or 2 Sync**

When this setting is "ON" the LFO will be synced to the MIDI beat clock, with the selected time division. This setting can be turned on for each individual LFO.

## **LFO 1 or 2 Key Sync**

Each LFO can individually be synced to a voice trigger/note-on event. When this feature is "ON", the LFO wave will reset to the beginning of the waveform on every voice trigger/note-on event.

## **LFO 1 or 2 max freq**

This sets the maximum frequency of LFO1 and LFO2, respectively. Range starts at 0.01 Hz and goes up to 100 Hz. This can be used to gain more precision in the low ranges. For instance, if you have an LFO period of an hour and want to set it to 61 minutes. The default is 50 Hz.

## **Mod Wheel -> LFO 1 or 2**

Enable this to amplify the entire MOD matrix row (LFO1 or LFO2) using your MIDI controller's mod wheel. Note that the default cutoff function of the mod wheel in earlier versions is now gone!

## **LFO1->2 Cross Modulation**

This is the amount of cross modulation between LFO1 and LFO2. LFO1 modulates the frequency of LFO2.

## **LFO 1 or 2 Quantization**

This quantizes the phase of the respective LFO unit. 1 denotes OFF, 1024 denotes maximum. Maximum phase quantization will limit the output of the LFO unit to just 2 states.

## Modulation Matrix

The modulation matrix allows you to set multiple modulation destinations per modulation source (LFO1, LFO2, CV1, CV2, Aftertouch, Timbre, Lift, Velocity, Pitch [from last note!]), instead of just the one-to-one routing available in the main screen.

The matrix is split into 9 rows in the menu. Push select once to enter the row. Turn to select a cell for editing. Then turn to increase or decrease value. The minimum is -1.0, and the maximum is +1.0. You can also use the horizontal slider to set values more quickly. Negative values allow LFO waveforms to be inverted. Tap again to leave edit mode, and hit Escape to exit the row. Escape also works to exit edit mode.

If you desire more precision when dialing in values in the matrix, use the “Cubic LFO amount curve” toggle.

If you change a value the main screen will recognize and display “MAT-” instead of a single destination. Tapping the destination button will remove the MATRIX status.

An important thing to keep in mind is that the GR-1 by default operates the LFO's and CV's in one-to-one mode. Only one modulation destination is possible per matrix row. Hold down one of the LFO Dest buttons for a while and they'll be lit and you'll enter matrix mode for the LFO amount knobs. No longer will matrix cells be cleared once you turn the LFO amount knobs or press the LFO Dest buttons. This makes matrix editing much faster also in the main screen.

This matrix/one-to-one toggle is a system wide setting that resets back to default at every boot. A saved patch will always restore the full matrix, but after every boot you will have to hold down the buttons to re-engage the matrix mode control (with lit buttons and everything).

Note that the MPE aftertouch, timbre, lift, velocity, and pitch modulation sources cannot drive tuning, or grain window destinations. There is only one stereo filter for each multitimbral part. This implies that cutoff is also only available on global modulation sources and on pitch. Modulation from pitch to cutoff is done by taking the last played or playing key. A tuning destination was left out, because MPE already has pitch bend per note, and we felt it could lead to confusion.

**For the modulation sources aftertouch, timbre, lift, velocity and pitch to take effect, MPE mode should be enabled in the performance menu.**

Mod matrix cells can also be changed directly via MIDI CC. See the CC table for details. Note that MPE matrix cells are not available as CC, for the simple reason there are not enough CC's available any more.

### **MPE Position clipping**

Toggles clipping if MPE modulates sample position. In some musical use-cases clipping is desirable, in others it isn't.

# Patch Keyboard

## Keyboard split 1,2

The keyboard can be split in 3 areas (0, 1, and 2) , using 2 splits options. Split 2 should always be at least as high as split 1 on the keyboard.

Area 0: left of split 1

Area 1: right of split 1, and possibly left of split 2

Area 2: right of split 2

If splits are off, everything is Area 0.

## Area 0..2 – Pos offset

This allows you to add a sample position to a keyboard area. It is added to the sample position generated from the matrix and by the position slider.

## Area 0..2 – Keyboard -> Pos

This allows you to map keyboard note to sample position. It is added to the sample position generated from the matrix and by the position slider. This can be used to step through the sample's gradients and/or parts.

## Area 0..1 – Pitch


Toggles pitch on and off. Useful if you want to have only sample position control in a keyboard area.

# System Configuration

## Configuration

To enter the performance configuration press [Shift] and then [Perf]. Then select the “System” Tab. The configuration parameters can be set with the (Select) knob. Leave this setup screen with [Escape]. Use [Shift] + [Escape] (aka “turbo escape”) to exit back to the main screen. Next time you use [Shift] + [Perf] you’ll be back at the option you left off at.

The firmware version can be found here in this menu: look in the top right.

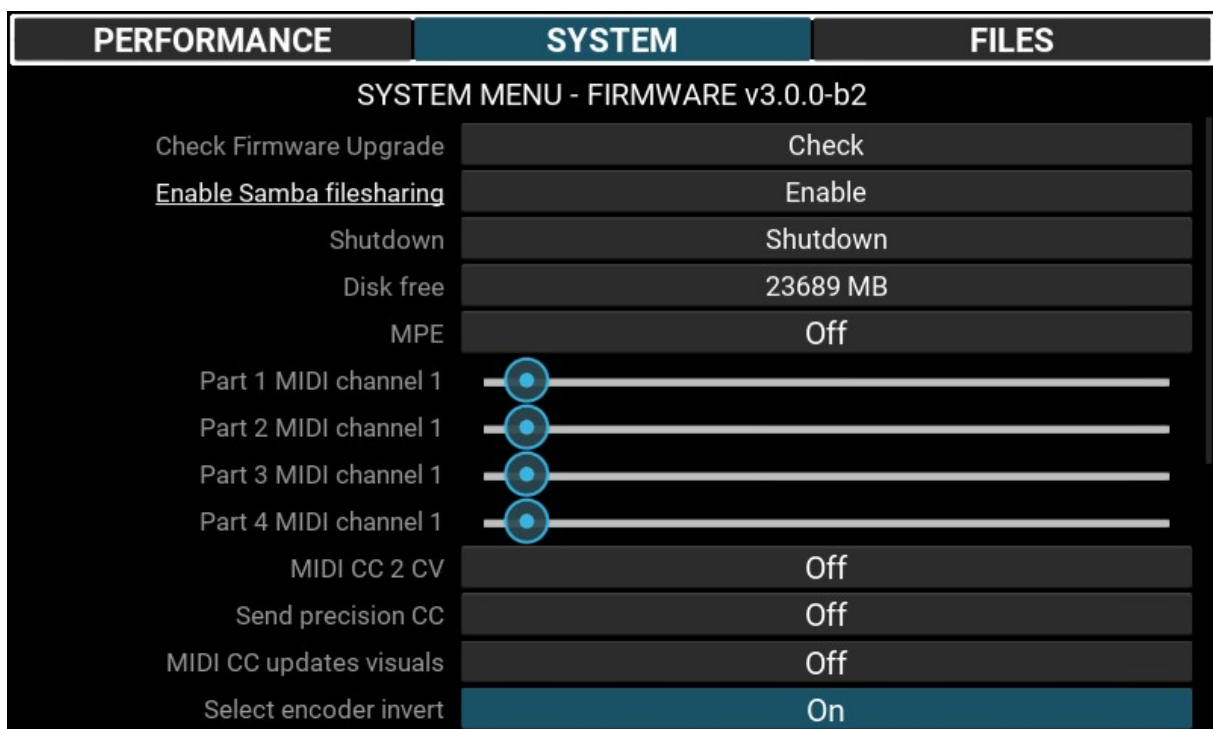

## Check Firmware Upgrade

This will check for firmware updates on the attached USB stick/drive and allow you to update from here. This is the same as what happens on boot with an attached USB stick with firmware updates on it. It has the added benefit of also checking for updates from the tasty chips site if the LAN cable is plugged in. Select and push again to check for new firmware. An online firmware upgrade has priority over one on the USB stick. Please keep this in mind.

## **Shutdown**

Initiates a clean shut down. This will take a few seconds. After this is over, you can switch off physical power. A clean shut down is necessary to avoid any data corruption.

## **Enable Samba file sharing**

Allows network file sharing over the Windows SMB protocol. This is also quite well supported by Macs. Since firmware 3.0 this needs to be explicitly enabled after booting. SFTP doesn't need this toggle. This toggle is here to avoid disk corruption for those of you that forget to shut down the machine in the correct manner.

## **Disk space**

Free disk space. If it's too low, it will go **RED**, and you will need to free up space with the File manager.

## **Midi Channels**

Since the GR-1 is multitimbral it allows you to set the MIDI channel for each of the four parts. Turn completely to the left to turn off MIDI handling for this part. Hold down "Shift" to set all four parts to the same channel.

## **Select encoder invert**

Reverse the direction when turning the select knob. This can be useful since newer and refurbished GR-1's can have a higher quality Select knob, but with reversed direction!

## **LED Brightness**

Controls the brightness of the LED buttons.

## **Potentiometer Setpoints**

When "ON" the potmeters/knobs of a saved patch are locked, until you turn/slide past the saved set point. From v1.2 and up it, setpoints will also be displayed numerically (30.4% for instance), under the lock icon. So that you know which side you have to turn to, to activate the control.

## **Direct shift**

When this is on, you'll have to keep Shift pressed to access secondary functions like the voice sliders or quick save. When this is off, the Shift button behaves like a toggle.

## **ADSR Slider mode**

The ADSR sliders can be just how they were intended, but also to control the individual volumes of the four play mode voices ("Voice vol"), or to control the individual volumes of the four parts ("Part vol").

## **Load sample: convert to 44.1**

Turn this on to force the GR-1 to convert every imported sample to native 44.1 kHz sample rate. Loaded samples that are already 44.1 kHz are not modified.

## **Big slider controls menu**

Turn this on to let the big slider control horizontal widgets like sliders and horizontal lists. Turn it off if you wish to control sample position while in a menu. The latter may be useful if you're changing menu controls while making music.

## **MIDI CC 2 CV**

This enabled to have CC 1 (modwheel) and 36 replace (emulate) the CV inputs. Useful if you're not using CV, but you do want direct control over the matrix without LFO's or MPE. CC1 (modwheel) replaces CV1, and CC36 replaces CV2.

## **MIDI CC updates visuals**

Since MIDI CC's can happen a lot if you're sequencing the GR-1 via MIDI. It may be convenient to turn the visual updates off. Turn it on if you want to keep track of the CC activity. May be useful for diagnostics.

## **Patch switch -> stop grains**

When switching patches grains are stopped. Clicks may be heard. If you turn this off, grains will keep playing: no clicks, but there may be old/long grains in other parts of the sample. This is nice for smooth transitions from patch to patch.

## **Pitchbend range**

Pitchbend range in semitones. Note that in previous firmwares ( $\leq 2.3$ ), the MPE toggle forced the range to 48 semitones, which is ideal for the Roli Seaboard, but other MPE controls may be more suited to smaller ranges.

## **DSP Metering**

Toggles a DSP processing bar in the main display. Full width means 100% CPU usage. Audio dropouts will occur already around 90%. Can be used to see how the GR-1 reacts to larger spray, bigger samples, larger grains, higher density, and higher polyphony.

## **MPE**

Turn on MPE support. This effectively supersedes MIDI channel selection. This will turn on an enormous pitch bend range, which is not recommended for normal MIDI input devices.

## **File selector: Sound previews**

Very big sample files can cause the file selector to slow down to a crawl. This is because the samples are loaded in and then played, and the code was not optimized yet. In 1.2.1 we added a switch to turn them off. This is off by default.

## **Send precision CC**

When one of the physical controls of the GR-1 is moved, send 14 bit NRPN's instead of just the normal 7 bit CC's. This affects MIDI OUT. MIDI OUT can only be used using a USB host-to-host interface.

# Loading and saving performances

## Saving a Performance

To save your performance, follow the next steps:

1. Hold [Shift] and press [Perf]. This will enter the system menu.
2. Using (Select), select the “Performance” tab, and press (Select). You will now enter the performance list.
3. Select the slot you want to save to. The blue one is the current one.
4. Press [Save] to the performance slot, and confirm. The performance save will now take place. The preset LEDs will start moving, illustrating the progress.

Cancelling and going back one step can be done with [Escape].

| PERFORMANCE             | SYSTEM | FILES |
|-------------------------|--------|-------|
| Slot 1 [Dopamine2]      |        |       |
| Slot 2 [New]            |        |       |
| Slot 3 [New]            |        |       |
| Slot 4 [New]            |        |       |
| Slot 5 [New]            |        |       |
| Slot 6 [New]            |        |       |
| Slot 7 [New]            |        |       |
| Slot 8 (Uninitialized)  |        |       |
| Slot 9 (Uninitialized)  |        |       |
| Slot 10 (Uninitialized) |        |       |

**CAUTION:** NEVER power down your GR-1 while saving. Data corruption may occur!

**NOTE:** Saving a performance takes time. If your performance uses large samples, and if you’re only modifying a single preset, please see the “Saving a patch” section.

Should you want to backup performances to your USB stick, or to your PC, then please use the File manager (System menu → Files), or use the LAN port to use network file sharing to backup your files.

## Loading an internal performance

To load a performance from one of the slots, follow the next steps:


1. Hold [Shift] and press [Perf]. This will enter the system menu.
2. Using (Select), select the “Performance” tab, and press (Select). You will now enter the performance list.
3. Select the slot you want load.
4. Press [Load], and confirm. The performance load will now take place. The preset LEDs will start moving, illustrating the progress.

Cancelling and going back one step can be done with [Escape].


## Loading an external performance

To load a performance from USB or a factory performance, follow the next steps:

1. Press the [Load] button. The data type selection dialog will now show.

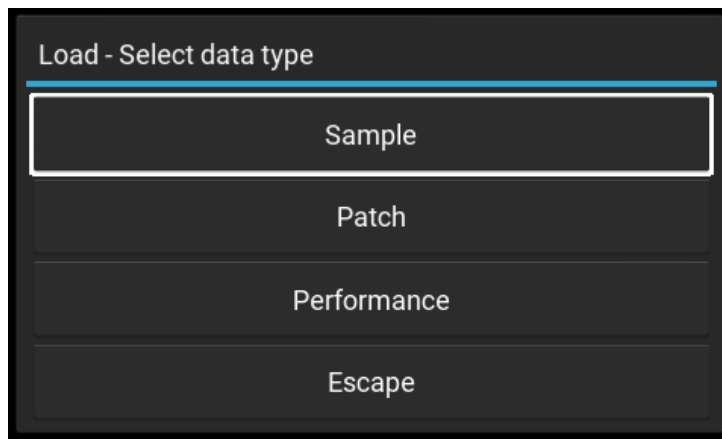

2. Press the [Perf] button if that type is not already selected, and press (Select). The file chooser will now show.
3. Navigate to the desired performance folder. A performance is denoted by the term “PERF” in the right column.

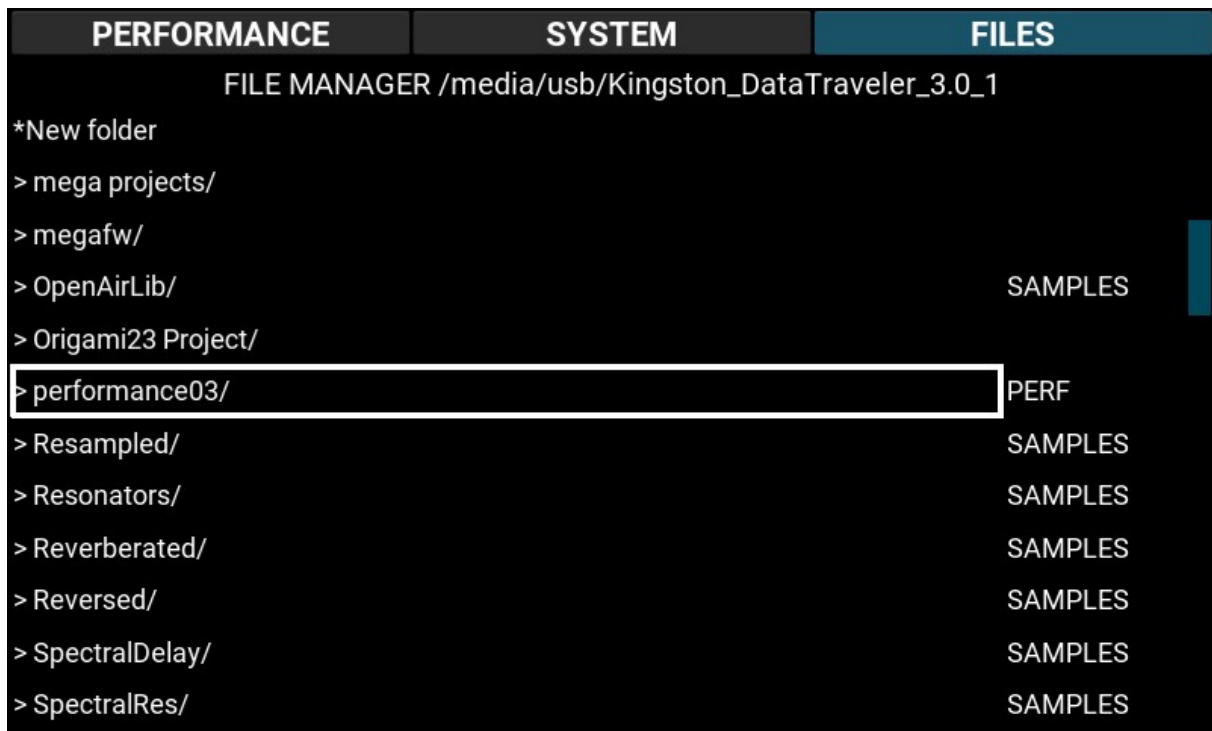

4. Press [Load]. The performance will now load, indicated by the moving preset LEDs, to show progress.


To **cancel** anytime or to go back one step, press [Escape].

Note that once you've loaded an external performance, or a factory performance for that matter, if you want to save something, you'll first be prompted to save the performance to an internal slot! Before you can save anything else like patch, sample, or multi, you'll first have to save the performance to a slot of your choosing.

## Initializing a performance

1. Hold [Shift] and press [Perf]. This will enter the system menu.
2. Using (Select), select the "Performance" tab, and press (Select). You will now enter the performance list.
3. Scroll to the desired slot using (Select).
4. Press (Select). The slot edit dialog will now show.
5. Select and press the Initialize GUI button, and then confirm
6. You can now load this newly initialized performance slot.

To initialize and automatically load the new slot, just press [Load] at step 4.

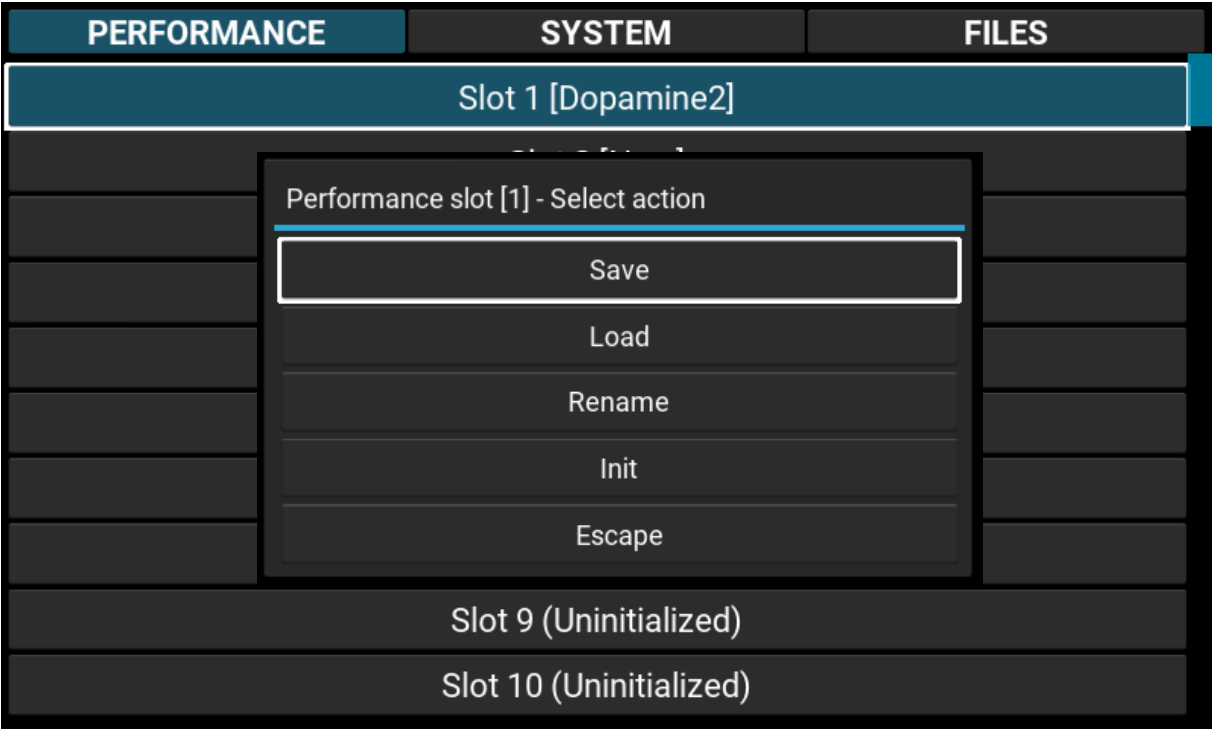

## Init from samples folder

Using this function you start from a bunch of samples of your choice. This loads a directory filled with samples into the preset slots. This function is operated as the loading but with Shift pressed when pressing load.

1. Press the [Load] button, you will now enter the load screen. [This procedure doesn't care about whether the Sample, Patch, or Perf buttons are lit. But it's useful to have Sample or Patch lit, as that will show actual sample files in the file chooser. Perf mode will filter them out.]
2. Use the Select knob to navigate, and highlight the desired folder filled with samples.
3. Hold down [Shift] and press [Load].

This loads the samples in the selected folder into the preset slots. Default patch parameters and performance menu settings are used.

## Copy preset to “all”


Copy a single preset or that preset template to all the preset slots in the performance. We like to call the preset's parameters (without sample) “template”.

1. Press the [Perf] button.
2. Select the preset you want copied.
3. Press [Copy].
  1. Just pressing [Copy] without [Shift] will copy the entire preset.
  2. Holding [Shift] and pressing [Copy] will copy the template.
4. A popup will ask if you want to proceed. Press (Select) to do so, or [Esc] to cancel.
5. If you pressed (Select), the preset (or its template) is copied to all the presets in the performance.

## The File Manager


The file manager or “Files” as the title bar is called allows you to copy, delete, and rename files. It also allows you to make new folders, and safely unmount inserted USB sticks. For now (firmware v3.0) this is how you make and restore backups.

Hold [Shift] and press [Perf] to enter the menu, then scroll to the Files tab, and press (Select).

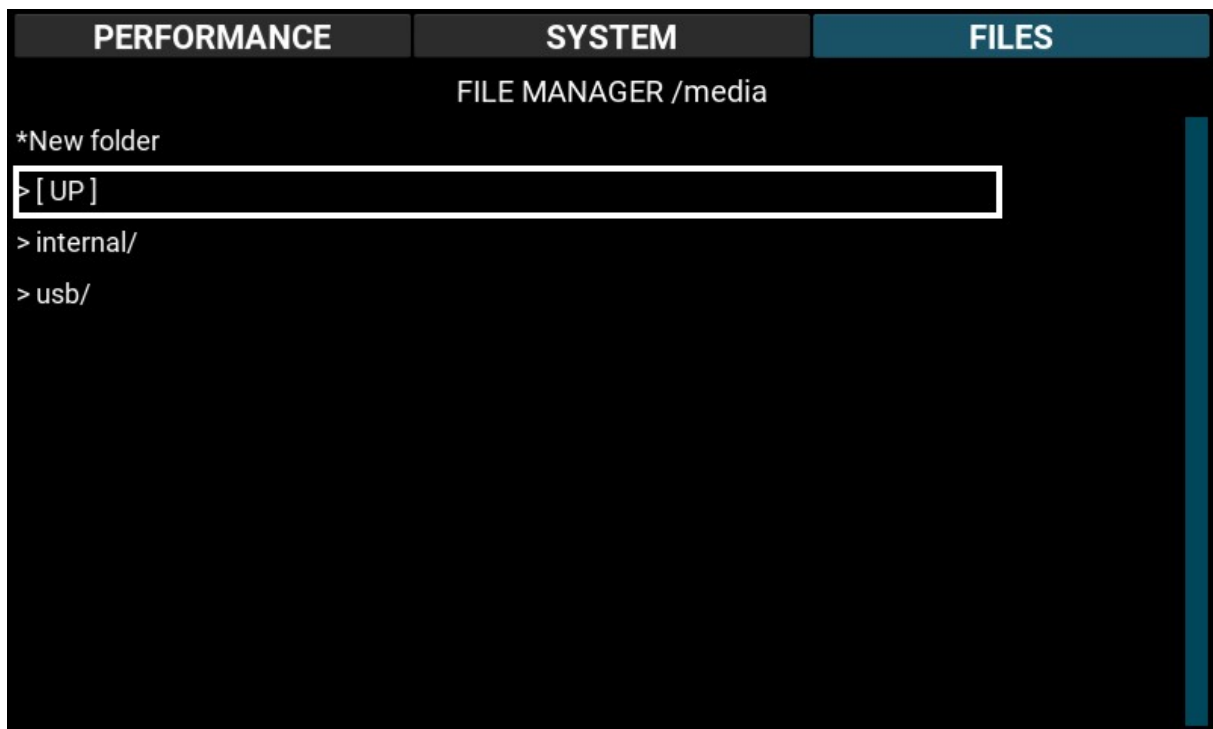

Almost everything is controlled with a combination of the [Shift] button and the encoder. Just holding shift and possibly turning selects files and folders. They'll become **BLUE**.

[Shift] + encoder push gives you access to the file edit menu:

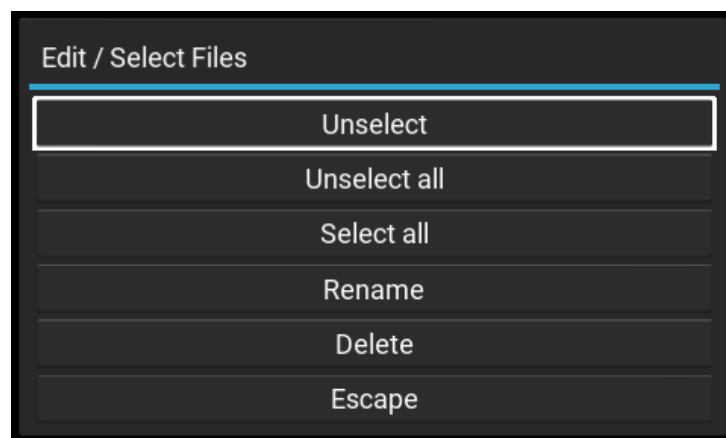

These are all straightforward.

\*New folder: scroll to this option and push the encoder. You'll then get a popup where you can enter your new folder's name. Already present folders are automatically postfixed with -2 -3 -4 etc.

## **Copying and deleting**

The idea here is that you first select files and folders, and then delete or copy them. Delete is found in the popup. Copy is done with the physical [Copy] button.

If you enter (traverse) a folder your selection is lost! This is because this way the screen is kept simple. You will always have a full overview of everything you've selected at any time. What You See Is What You Get.

Delete:

1. Select files using Shift + encoder. You can also unselect items with the popup.
2. Use [Shift] + encoder push to enter the edit popup.
3. Choose delete and confirm.

Copy:

1. Select files using Shift + encoder. You can also unselect items with the popup.
2. Press [Copy]. The button will start slowly blinking. The files are now registered to copy.
3. Navigate to the folder where you want to paste the files.
4. Press [Copy] again. You'll be presented with a confirmation dialog. If you confirm then the files will be copied and you'll see the progress displayed in a popup as "xx%".

## **Unmounting USB drives**

1. Navigate to `/media/usb`
2. Turn the encoder to focus on the USB drive you want to unmount.
3. Hold [Shift] and push encoder. You'll be prompted a confirmation dialog.
4. Confirm.

## Notes

Please note that factory data and some important folders like `/media/internal`, `/media/internal/user`, etc cannot be modified. They're protected. You also cannot copy a file to the same folder.

# Network file sharing

GR-1 models released since December 2022 support network file sharing via Microsoft SMB protocol. This means you can use the LAN port, hook it up to your router or switch, and you'll be able copy performances and samples directly to your GR-1 from your PC or Mac. This adds a wealth of possibilities and simplifies uploading samples, and backing up your data.

The GR-1 advertises itself over Bonjour/Avahi protocol as "gr-1.local". Older models are not advertised, but can be accessed by using SFTP (via WinSCP or Cyberduck on Mac). Read the section "SFTP" at the end of this chapter if you have an older model.

At the moment of writing MacOS 12 and up don't properly support the legacy SMB file sharing of the GR-1. We're working on solving this problem. In the meantime you can use SFTP as highlighted in the section "SFTP".

## Logging in

Open your file browser. On Mac that's Finder, on Windows Explorer, and on linux that could be your prompt or Files (Ubuntu), Nautilus, or so.

### Ubuntu - Files

1. Click on "Other locations"
2. Click on "gr-1.local"
3. Double click on "internal" and enter your credentials:
  - i. Login as registered user.
  - ii. Username: sysop
  - iii. Password: posys
  - iv. Login

### Windows

1. Open windows explorer
2. Click "Network Neighborhood"
3. Click on "gr-1.local" and enter your credentials:
  - i. Login as registered user.
  - ii. Username: sysop
  - iii. Password: posys
  - iv. Login

## MacOS

On your Mac, click the Finder icon  in the Dock to open a Finder window, then click Network in the Locations section of the sidebar.

If no items appear in the Locations section of the sidebar, hold the pointer over the word

*Locations*, then click the arrow .

- In the Finder window, double-click the computer you want to connect to, then click Connect As.
- Connect to the GR-1 as registered user:
  - *Registered User*: Connect to the other Mac using a valid login name and password. If "Only these users" is selected on the other Mac, make sure the login name you're using is on the list of allowed users.
  - Username: sysop  
Password: posys

## Copying, moving, and renaming files

Once you've logged in, you can drag and drop, copy and paste files to your hearts desire. Some examples:

\* Naming your performance folders in `/media/internal`

For instance `Performance02` → `ThisAmbientGlitchIDid`

**NOTE:** Never rename `Performance01` to something else as the GR-1 always starts up with this performance!

- \* Creating a directory named `Samples` in `/media/internal` and copying a part of your sample library there.

- \* Creating a directory named `Patches` in `/media/internal` and copying a bunch of separate patch folders there.

- \* Adding new performance folders.. Yes, there can be more than 50. Just mind the note about disk space written below.

- \* Creating an entire tree of folders inside the folders.

**NOTE:** The internal storage is limited. There's only about 20GB free on the factory furnished SD card. While filling it up completely with sample data is possible, eventually the GR-1 will complain that it cannot save new performances. Beware of this and remove some of your sample of patch library if necessary. Use your PC's/Mac's file browser to check how much space is left.

**NOTE:** Renaming any files inside a performance may cause the GR-1 to fail loading the performance. You'll have to restore the performance to its original state. You have been warned!

**NOTE:** The folder `/media/internal/factory` is read-only. It cannot be changed. For good reason.

## Factory reset via file sharing

Network file sharing allows for a manual factory reset that's relatively easy.

- \* Copy `/media/internal/factory/Springpack2020` to `/media/internal/Performance01`.

\* Empty out /media/internal/Performance02 through /media/internal/Performance50

\* Delete any sample or patch folders you may have copied there yourself

## SFTP

All GR-1 models, old and new, support file transfer over the SFTP protocol. On Mac and Windows this requires you to download a freeware app, so it is slightly less comfortable than directly accessing the files via SMB, as available on newer models. On Linux, however, it is typically fully integrated into the file browser and as comfortable as SMB.

**NOTE:** Contrary to the SMB file sharing, SFTP allows you to access the user's home directory. If you delete anything here, you may end up with a non-working GR-1. SFTP is considered expert use. We are not responsible. You have been warned.

The older models (< Dec 2022) can be found on your LAN as:

<sftp://gr1breadboard.local>

BEWARE: This only allows write-protected file sharing. This means it's only usable as a solution for network backups.

The newer models are available as, and allow full read and write access:

<sftp://gr-1.local>

username: sysop

password: posys

Mac:

Download Cyberduck <https://cyberduck.io/>

1. Open Cyberduck, and click "Open Connection"
2. Protocol: SFTP
3. Username: sysop, password: posys
4. Browse to `/media/internal`, using the bar in top of the window

Windows:

Download WinSCP <https://winscp.net/eng/index.php>

Browse to `/media/internal`

Linux:

Use scp on the prompt, or use "Files" and enter the url.

Browse to `/media/internal`

# Timbrality

Since firmware 2.0 the GR-1 can operate either monotimbral, which means it plays a single patch, or multitimbral, which means it plays multiple patches at the same time. By default it runs in monotimbral mode.

## Entering multitimbral mode

You can add patches to the mix using Shift + preset buttons 1, 2, 3, and 4. The sample display will automatically be split in 4 parts, indicating you're now running multitimbral mode. The new patch can be immediately heard.

You can now just switch patches using the preset buttons, control the patch parameters like you're used to. The knobs change the patch parameters of the currently highlighted ("focused") part. The last part activated is displayed in a lighter shade of grey.

## Focus on a part

Since firmware 2.1, you can use the Select knob to scroll and focus on a part of your choosing.

Pressing this button combination (Shift + preset 1, 2, 3, or 4) again on an active part will remove the preset from the part. When only a single patch is left, the display goes back to monotimbral mode, displaying only a single sample.

NOTE: The same part cannot be present in multiple parts. The GR-1 will refuse to add the same patch twice. Since firmware 2.3 it will show this with a popup.

## MIDI configuration

Patches can respond to different MIDI channels, and can be sensitive to play mode. This can be done in the patch menu. Which makes multitimbral mode so flexible. This way you can even record and granulate a live sample on one part and play chords and solos on other patches, all at the same time.

NOTE: Increasing the number of parts will yield higher polyphony. Restrictions to polyphony apply and are outlined in the next section.

# Polyphony

This section explains the GR-1's forms of polyphony, the voice stealing algorithm, the grain window, and how to make the best of them.

## Forms of polyphony

The GR-1 has two forms of polyphony:

- *Grain polyphony*: 128 grains per voice
- *Voice polyphony*: corresponding to playing notes: 11 voices at the time of writing.

## Voice timbre

A voice may have anywhere from 0 to 128 grains playing at any time. This allows the flexibility to have a single grain playing (sporadically) up to a massive “cloud” of grains. No amount of playing notes will cause the amount of grains to be modified by the engine. The timbre of the voice will be kept intact as much as possible.

## Note hold

The GR-1 supports the MIDI hold CC. Since version 2.1 this acts like the standard hold function, instead of just holding previously playing notes. That is, all new notes will remain playing even if your fingers were lifted from the keyboard. This remains this way until hold is turned off again.

## Voice stealing

When the GR-1 reaches maximum voice polyphony and the user presses yet more notes on the keyboard, it will choose to abruptly remove the oldest playing note, preferably already in release, that is not being held (by the hold CC explained above). It also makes choices based on the position of the notes on the keyboard in relation to each other. This should make note polyphony as full and responsive as possible.

## Grain stealing

When the maximum amount of grains per voice (128) is reached, the grain scheduler will stall until grains have reached their end. This results in an oscillation effect where there's a big bunch of grains in one place and nothing elsewhere. Grain stealing remedies this effect. It will steal grains in a way that is inaudible to the user: no crackles or clicks. The only drawback is that it (logically) shortens grains. This depends a lot on the Grain stealing threshold setting. See the patch menu.

## **Audio, and avoiding drop-outs**

When pushing the GR-1's engine, audio dropouts can occur. It is important to remember that granular synthesis is random in nature. Too much and too scattered access to sample memory will result in a high strain on the engine..

- Maximum voice polyphony is caused by long envelope release and fast playing on the keyboard.. Beware, the GR-1 allows almost 50 second long envelope release!
- Maximum grain polyphony is caused by high grain size and density.
- High spray and long samples will cause scattering of sample memory access.

A suitable comparison is cooking with only 4 burners on your stove, but having a lot of pans around. The more powerful your hardware is, the more burners you have. The larger the sample, the higher the spray, and polyphony, the more pans you'll have around. You'll have to swap out many pans many times which causes slow downs.

The combination of the above factors can cause audio dropouts. The solution is to be aware of them, and apply some practical knowledge:

- If you desire long releases and many playing notes: consider limiting spray and/or choosing shorter samples. Alternatively, choose a short envelope release and use the built-in delay effect or use an external reverb that can generate long releases.
- With longer grains, it's often enough to have a density of 100 grains per second.
- The on-board play mode can be adequate for drones, by just using 4 voices.
- Anti-aliasing may be turned off. This is not recommended, but the aliasing sounds can be used creatively, in some cases.

## **Master volume and patch volume**

When note polyphony increases the total volume will also increase. There is no compression on the end mix, so it will start hard clipping the output. So keep in mind that you can lower the volume with the master knob.

Note firmware 1.4.2 onwards has higher volume than before. Since firmware 2.2 the patch volume can go a lot higher than before, and will cause similar clipping if not handled with care.

## **Grain window modification**

For the sake of simplicity and optimization, there is only a single global grain window per part. This means that any change to the window while it is playing might result in crackles. However, if the

change is gradual and the window shape is convex (that means not pointy), the crackles will be minimal.

### **Temperature and the internal fan**

When the strain on the engine increases the physical power of the computer in the GR-1 also increases. Which, after a while, leads to higher temperatures. At about 70 degrees C it will turn on the fan, in order to keep cool. This happens in warmer climates (room temperatures > 25C) and continued strain on the engine for a couple of minutes.

## Menu screens

Related to temperature and dropouts is also the screen you are using. The main screen has many animated components, so will stress the system more. A menu screen uses less CPU and GPU horsepower so it will run cooler and dropouts will be less likely. If you've exhausted all other options, this may be useful to know.

| On board controls            |                          |                                                                                                                  |
|------------------------------|--------------------------|------------------------------------------------------------------------------------------------------------------|
| Controls                     | Screen/mode              | Function in screen                                                                                               |
| Position slider              | Main                     | Sample position                                                                                                  |
| Position slider              | Menus                    | Cell select / toggle, slider value                                                                               |
| Escape button                | All, except main         | Escape to previous naming/saving step or screen                                                                  |
| Escape button (keep pressed) | All                      | Tuning oscillator                                                                                                |
| Shift                        | File manager             | Add file/folder to selection                                                                                     |
| Shift + Escape               | Naming                   | Backspace                                                                                                        |
| Play                         | All                      | Toggle play mode                                                                                                 |
| Play (hold 3 seconds)        | All                      | Emergency engine stop: stop all voices                                                                           |
| Shift + Play                 | All                      | Sample audition mode                                                                                             |
| Sample                       | All                      | Set sample data type                                                                                             |
| Shift + Sample               | All                      | Enter sampling menu                                                                                              |
| Patch                        | All                      | Set patch data type                                                                                              |
| Shift + Patch                | All                      | Enter patch menu                                                                                                 |
| Performance                  | All                      | Set performance data type                                                                                        |
| Shift + performance          | All                      | Enter performance/system menu                                                                                    |
| Load                         | All                      | Enter load menu for selected IO mode (sample, patch, or performance)                                             |
| Shift + Load                 | All                      | Kill sample, patch, or performance. Shift should explicitly be pressed. Toggle mode is ignored!                  |
| Save                         | All                      | Save popup                                                                                                       |
| Save                         | Save popup, file chooser | Confirm save or overwrite                                                                                        |
| Shift + Save                 | Main                     | Reserved for future features (Quick save in 1.x, 2.x)                                                            |
| Copy                         | Main, File manager       | Remember source item for copying (sample, or patch, or file) to buffer. If blinking paste from buffer to current |

|                                       |                            |                                                                                     |
|---------------------------------------|----------------------------|-------------------------------------------------------------------------------------|
|                                       |                            | patch/sample.                                                                       |
| Copy [when Perf button is lit]        | Main                       | Copy preset to all presets, including sample.                                       |
| Shift + Copy [when Perf button lit]   | Main                       | Copy patch [WITHOUT SAMPLE] to all presets!                                         |
| Wave1, Wave2                          | All                        | Set next LFO waveform for LFO1, or LFO2                                             |
| Shift + [Wave 1, or Wave2]            | All                        | Toggle LFO AUX waveform recording (REC<->STOP)                                      |
| Dest1, Dest2                          | All                        | Set next destination for LFO1, or LFO2                                              |
| Shift + Dest1, Dest2                  | All                        | Set next destination for CV1, or CV2                                                |
| Dest1, Dest2 (hold down)              | All                        | Toggle between single source-dest mode and matrix mode. Both buttons will light up. |
| Shift + Wave1 + Wave2 + Dest1 + Dest2 | System menu                | Factory reset (!!)                                                                  |
| Turn Select + Dest1, Dest2            | All                        | Quickly scroll back & forth through LFO destinations.                               |
| Shift + Turn Select + Dest1,2         | All                        | Quickly scroll back & forth through CV destinations.                                |
| Preset 1..8                           | All                        | Set current part to patch 1..8 within current bank, return to main screen.          |
| Shift + Preset 1..4                   | All                        | Toggle part 1..4 on/off                                                             |
| Bank 1..4                             | All                        | Select bank, patch will change directly                                             |
| Shift + Bank 1..4                     | All (play mode ON)         | Toggle or trigger voice 1..4                                                        |
| Shift + Bank 1..4                     | All (play mode OFF)        | Switch to Multi timbral preset 1..4                                                 |
| Density                               | All (MIDI grain clock OFF) | Set density                                                                         |
| Density                               | All (MIDI Grain clock ON)  | Set MIDI grain clock MUL                                                            |
| Density + Shift                       | All (MIDI Grain clock ON)  | Set MIDI grain clock DIV                                                            |
| Grain size                            | All                        | Set grain size                                                                      |
| Spray                                 | All                        | Set spray area                                                                      |
| Pitch (aka Tune)                      | All, except tape mode      | Tune -1 .. +1 octave                                                                |
| Pitch (aka Tune)                      | Tape mode                  | Tape slew rate                                                                      |
| FX1                                   | All                        | Set FX1 control as mapped by FX mapping in patch menu                               |
| FX2                                   | All                        | Set FX2 control as mapped by FX mapping in patch menu                               |
| Shift + FX2                           | All                        | Patch volume                                                                        |

|                            |                           |                                                                                     |
|----------------------------|---------------------------|-------------------------------------------------------------------------------------|
| Pan spray                  | All                       | Set pan spray                                                                       |
| Scan                       | All, except audition mode | Set scan speed                                                                      |
| Scan                       | Scan clock sync = ON      | Set scan clock multiplier                                                           |
| Shift + Scan               | Granular mode             | Set forward/reverse direction bias                                                  |
| Shift + Scan               | Scan clock sync = ON      | Set scan clock divider                                                              |
| Sides                      | All                       | Set grain window sides                                                              |
| Sides + Shift              | All                       | Set loop start                                                                      |
| Tilt                       | All                       | Set grain window tilt                                                               |
| Curve                      | All                       | Set grain window curve                                                              |
| Shift + Curve              | All                       | Set loop end                                                                        |
| Attack                     | All                       | Set ADSR attack                                                                     |
| Shift + Attack             | All (Play mode ON)        | Set Voice 1 pitch                                                                   |
| Decay                      | All                       | Set ADSR decay                                                                      |
| Shift + Decay              | All (Play mode ON)        | Set Voice 2 pitch                                                                   |
| Sustain                    | All                       | Set ADSR sustain                                                                    |
| Shift + Sustain            | All (Play mode ON)        | Set Voice 3 pitch                                                                   |
| Release                    | All                       | Set ADSR release                                                                    |
| Shift + Release            | All (Play mode ON)        | Set Voice 4 pitch                                                                   |
| Master                     | All                       | Master volume                                                                       |
| Select button              | Main                      | Toggle record (if enabled in sampling menu!)                                        |
| Select button              | Menus                     | Select/deselect row, and cell (when row selected)                                   |
| Shift + Select button      | Naming                    | Insert space                                                                        |
| Shift + Select button      | File manager              | File edit menu                                                                      |
| Select knob (turn)         | Main (monotimbral)        | Fine adjust loop start / loop end, and various other knobs, when previously touched |
| Select knob (turn)         | Main (multitimbral)       | Scroll to parts in order to apply focus                                             |
| Select knob (turn)         | Menus                     | Scroll through rows or cells                                                        |
| Shift + Select knob (turn) | All                       | Scroll or adjust at x10 speed                                                       |
| Freq1,2                    | All                       | Adjust LFO speed                                                                    |
| Freq1,2                    | MIDI LFO Clock sync ON    | Adjust LFO clock multiplier                                                         |
| Shift + Freq1,2            | MIDI LFO Clock sync ON    | Adjust LFO clock divider                                                            |
| Amount1,2                  | All                       | Adjust LFO amount                                                                   |
|                            |                           |                                                                                     |

| MIDI Command table |                   |              |           |                                                                                                                                                                       |                 |
|--------------------|-------------------|--------------|-----------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------|
| MIDI msg.          | GR-1 parameter    | Command / CC | Value     | Range/description                                                                                                                                                     | Control curve   |
| Pitch bend         | Pitch bend        | -            | 0 - 16383 | see CC 60 (pitchbend range)                                                                                                                                           | 2^n             |
| Program change     | Select patch      | -            | 0 - 31    | MIDI PGM 0..7 -> Preset 1..8, Bank 1;<br>MIDI PGM 8..15 -> Preset 1..8, Bank 2;<br>MIDI PGM 16..23 -> Preset 1..8, Bank 3;<br>MIDI PGM 24..31 -> Preset 1..8, Bank 4; |                 |
| Note on            | Note on           | -            | 0-127     |                                                                                                                                                                       | Linear (volume) |
| Note off           | Note off          | -            | 0-127     |                                                                                                                                                                       |                 |
| CC                 | MOD wheel         | 1            | 0 - 127   | Cutoff (additive) 0..10 kHz, CV1 emulation                                                                                                                            | linear          |
| CC                 | position          | 2            | 0 - 127   | Start .. end of sample                                                                                                                                                | linear          |
| CC                 | density           | 3            | 0 - 127   | 0.1 .. 1000 grains/s                                                                                                                                                  | cubic           |
| CC                 | grain size        | 4            | 0 - 127   | 5 ms .. 5000 ms                                                                                                                                                       | cubic           |
| CC                 | spray             | 5            | 0 - 127   | 0 .. full sample size                                                                                                                                                 | linear          |
| CC                 | NRPN value MSB    | 6            | 0 - 127   |                                                                                                                                                                       | -               |
| CC                 | GM Volume         | 7            | 0 - 127   | Preset volume                                                                                                                                                         | cubic           |
| CC                 | cutoff            | 8            | 0 - 127   | 0 Hz .. 20 kHz                                                                                                                                                        | cubic           |
| CC                 | resonance         | 9            | 0 - 127   | 127: just below self-oscillation                                                                                                                                      | linear          |
| CC                 | panspray          | 10           | 0 - 127   | mono..total stereo                                                                                                                                                    | linear          |
| CC                 | scan              | 11           | 0 - 127   | -2x .. +2x replay speed                                                                                                                                               | linear          |
| CC                 | Window - Sides    | 12           | 0 - 127   | 0..1 (no sides .. no center)                                                                                                                                          | linear          |
| CC                 | Window - tilt     | 13           | 0 - 127   | -1..+1 (left .. right)                                                                                                                                                | linear          |
| CC                 | Window - curve    | 14           | 0 - 127   | -1..+1 (hollow..fat)                                                                                                                                                  | linear          |
| CC                 | LFO 1 waveform    | 15           | 0 - 3     | 0:SINE, 1:RAND, 2:SAW, 3:SQR                                                                                                                                          |                 |
| CC                 | LFO 2 waveform    | 16           | 0 - 3     | 0:SINE, 1:RAND, 2:SAW, 3:SQR                                                                                                                                          |                 |
| CC                 | LFO 1 frequency   | 17           | 0 - 127   | 50 mHz .. 50 Hz                                                                                                                                                       | cubic           |
| CC                 | LFO 1 amount      | 18           | 0 - 127   |                                                                                                                                                                       | linear          |
| CC                 | LFO 2 frequency   | 19           | 0 - 127   | 50 mHz .. 50 Hz                                                                                                                                                       | cubic           |
| CC                 | LFO 2 amount      | 20           | 0 - 127   |                                                                                                                                                                       | linear          |
| CC                 | CV1 amount        | 21           | 0 - 127   |                                                                                                                                                                       | linear          |
| CC                 | CV2 amount        | 22           | 0 - 127   |                                                                                                                                                                       | linear          |
| CC                 | Attack time       | 23           | 0 - 127   | 0 ms .. 23 s (linear)                                                                                                                                                 | cubic (special) |
| CC                 | Decay time        | 24           | 0 - 127   | 0 ms .. 45 s (exp)                                                                                                                                                    | cubic (special) |
| CC                 | Sustain amplitude | 25           | 0 - 127   |                                                                                                                                                                       | linear          |
| CC                 | Release time      | 26           | 0 - 127   | 0 ms .. 45 s (exp)                                                                                                                                                    | cubic (special) |
| CC                 | LFO1 destination  | 27           | 0-10      | 0:TUNE, 1:POS, 2:SPRAY, 3:SIZE, 4:DENS, 5:CUTOFF, ..                                                                                                                  |                 |

|    |                    |    |         |                                                                        |        |
|----|--------------------|----|---------|------------------------------------------------------------------------|--------|
| CC | LFO2 destination   | 28 | 0-10    | 0:TUNE, 1:POS, 2:SPRAY, 3:SIZE, 4:DENS, 5:CUTOFF, ..                   |        |
| CC | CV1 destination    | 29 | 0-10    | 0:TUNE, 1:POS, 2:SPRAY, 3:SIZE, 4:DENS, 5:CUTOFF, ..                   |        |
| CC | CV2 destination    | 30 | 0-10    | 0:TUNE, 1:POS, 2:SPRAY, 3:SIZE, 4:DENS, 5:CUTOFF, ..                   |        |
| CC | LFO1 key sync      | 31 | 0-1     |                                                                        |        |
| CC | LFO2 key sync      | 32 | 0-1     |                                                                        |        |
| CC | MOD wheel LSB      | 33 | -       | UNUSED                                                                 |        |
| CC | LFO1 clock sync    | 34 | 0-1(+)  | 0:OFF, >0:ON                                                           |        |
| CC | LFO2 clock sync    | 35 | 0-10    | 0:OFF, >0:ON                                                           |        |
| CC | CV2 emulation      | 36 | 0 - 127 | [0.0 .. 10.0]                                                          | cubic  |
| CC | Grain Fwd/Rev bias | 37 | 0-127   | -1.0 .. +1.0 (NOTE: this used to be antialias toggle in firmware <2.2) | linear |
| CC | NRPN value LSB     | 38 | 0 - 127 |                                                                        | -      |
| CC | Master volume      | 39 | 0 - 127 | 0.0 .. 1.00                                                            | cubic  |
| CC | MOD LFO1-TUNE      | 40 | 0-127   | -1.0 .. +1.0                                                           | linear |
| CC | MOD LFO1-POS       | 41 | 0-127   | -1.0 .. +1.0                                                           | linear |
| CC | MOD LFO1-SPRAY     | 42 | 0-127   | -1.0 .. +1.0                                                           | linear |
| CC | MOD LFO1-SIZE      | 43 | 0-127   | -1.0 .. +1.0                                                           | linear |
| CC | MOD LFO1-DENS      | 44 | 0-127   | -1.0 .. +1.0                                                           | linear |
| CC | MOD LFO1-CUTOFF    | 45 | 0-127   | -1.0 .. +1.0                                                           | linear |
| CC | MOD LFO2-TUNE      | 46 | 0-127   | -1.0 .. +1.0                                                           | linear |
| CC | MOD LFO2-POS       | 47 | 0-127   | -1.0 .. +1.0                                                           | linear |
| CC | MOD LFO2-SPRAY     | 48 | 0-127   | -1.0 .. +1.0                                                           | linear |
| CC | MOD LFO2-SIZE      | 49 | 0-127   | -1.0 .. +1.0                                                           | linear |
| CC | MOD LFO2-DENS      | 51 | 0-127   | -1.0 .. +1.0                                                           | linear |
| CC | MOD LFO2-CUTOFF    | 52 | 0-127   | -1.0 .. +1.0                                                           | linear |
| CC | MOD CV1-TUNE       | 53 | 0-127   | -1.0 .. +1.0                                                           | linear |
| CC | MOD CV1-POS        | 54 | 0-127   | -1.0 .. +1.0                                                           | linear |
| CC | MOD CV1-SPRAY      | 55 | 0-127   | -1.0 .. +1.0                                                           | linear |
| CC | MOD CV1-SIZE       | 56 | 0-127   | -1.0 .. +1.0                                                           | linear |
| CC | MOD CV1-DENS       | 57 | 0-127   | -1.0 .. +1.0                                                           | linear |
| CC | MOD CV1-CUTOFF     | 58 | 0-127   | -1.0 .. +1.0                                                           | linear |
| CC | MOD CV2-TUNE       | 59 | 0-127   | -1.0 .. +1.0                                                           | linear |
| CC | Pitchbend range    | 60 | 0 - 127 | 0 -> -1 octave, 64 -> original pitch, 127 -> +1 octave                 | 2^n    |
| CC | MOD CV2-POS        | 61 | 0-127   | -1.0 .. +1.0                                                           | linear |
| CC | MOD CV2-SPRAY      | 62 | 0-127   | -1.0 .. +1.0                                                           | linear |
| CC | MOD CV2-SIZE       | 63 | 0-127   | -1.0 .. +1.0                                                           | linear |
| CC | Sustain pedal      | 64 | 0-127   | 0: release held notes, >=64: hold playing notes                        |        |
| CC | MOD CV2-CUTOFF     | 65 | 0-127   | -1.0 .. +1.0                                                           | linear |
| CC | Scan key sync      | 66 | 0-1     |                                                                        |        |
| CC | Tune               | 67 | 0 - 127 | -1 .. +1 octave                                                        | 2^n    |

|    |                      |     |         |                     |        |
|----|----------------------|-----|---------|---------------------|--------|
| CC | MOD CV2-DENS         | 68  | 0-127   | -1.0 .. +1.0        | linear |
| CC | REC(ord sample)      | 69  | 0-127   | 0: stop, >=1: start |        |
| CC | Grain clock sync     | 71  | 0-127   | 0: OFF, >=1: ON     |        |
| CC | MOD LFO1-SIDES       | 72  | 0-127   | -1.0 .. +1.0        | linear |
| CC | MOD LFO1-TILT        | 73  | 0-127   | -1.0 .. +1.0        | linear |
| CC | MOD LFO1-CURVE       | 75  | 0-127   | -1.0 .. +1.0        | linear |
| CC | MOD LFO2-SIDES       | 76  | 0-127   | -1.0 .. +1.0        | linear |
| CC | MOD LFO2-TILT        | 77  | 0-127   | -1.0 .. +1.0        | linear |
| CC | MOD LFO2-CURVE       | 78  | 0-127   | -1.0 .. +1.0        | linear |
| CC | MOD CV1-SIDES        | 79  | 0-127   | -1.0 .. +1.0        | linear |
| CC | MOD CV1-TILT         | 80  | 0-127   | -1.0 .. +1.0        | linear |
| CC | MOD CV1-CURVE        | 81  | 0-127   | -1.0 .. +1.0        | linear |
| CC | MOD CV2-SIDES        | 82  | 0-127   | -1.0 .. +1.0        | linear |
| CC | MOD CV2-TILT         | 83  | 0-127   | -1.0 .. +1.0        | linear |
| CC | MOD CV2-CURVE        | 84  | 0-127   | -1.0 .. +1.0        | linear |
| CC | MOD TIMBRE-DENS      | 85  | 0-127   | -1.0 .. +1.0        | linear |
| CC | MOD TIMBRE-CUTOFF    | 86  | 0-127   | -1.0 .. +1.0        | linear |
| CC | MOD TIMBRE-TUNE      | 87  | 0-127   | -1.0 .. +1.0        | linear |
| CC | MOD TIMBRE-POS       | 88  | 0-127   | -1.0 .. +1.0        | linear |
| CC | MOD TIMBRE-SPRAY     | 89  | 0-127   | -1.0 .. +1.0        | linear |
| CC | MOD TIMBRE-SIZE      | 90  | 0-127   | -1.0 .. +1.0        | linear |
| CC | MOD TIMBRE-SIDES     | 91  | 0-127   | -1.0 .. +1.0        | linear |
| CC | MOD TIMBRE-TILT      | 92  | 0-127   | -1.0 .. +1.0        | linear |
| CC | MOD TIMBRE-CURVE     | 93  | 0-127   | -1.0 .. +1.0        | linear |
| CC | MOD VELOCITY-DENS    | 94  | 0-127   | -1.0 .. +1.0        | Linear |
| CC | MOD VELOCITY -CUTOFF | 95  | 0-127   | -1.0 .. +1.0        | Linear |
| CC | MOD VELOCITY -TUNE   | 96  | 0-127   | -1.0 .. +1.0        | Linear |
| CC | MOD VELOCITY -POS    | 97  | 0-127   | -1.0 .. +1.0        | Linear |
| CC | MOD VELOCITY -SPRAY  | 103 | 0-127   | -1.0 .. +1.0        | Linear |
| CC | MOD VELOCITY -SIZE   | 104 | 0-127   | -1.0 .. +1.0        | Linear |
| CC | MOD VELOCITY -SIDES  | 105 | 0-127   | -1.0 .. +1.0        | Linear |
| CC | MOD VELOCITY -TILT   | 107 | 0-127   | -1.0 .. +1.0        | Linear |
| CC | MOD VELOCITY -CURVE  | 108 | 0-127   | -1.0 .. +1.0        | linear |
| CC | MOD AFTER -DENS      | 109 | 0-127   | -1.0 .. +1.0        | Linear |
| CC | MOD AFTER -CUTOFF    | 110 | 0-127   | -1.0 .. +1.0        | Linear |
| CC | MOD AFTER -TUNE      | 111 | 0-127   | -1.0 .. +1.0        | Linear |
| CC | MOD AFTER -POS       | 112 | 0-127   | -1.0 .. +1.0        | Linear |
| CC | MOD AFTER -SPRAY     | 113 | 0-127   | -1.0 .. +1.0        | Linear |
| CC | MOD AFTER -SIZE      | 114 | 0-127   | -1.0 .. +1.0        | Linear |
| CC | MOD AFTER -SIDES     | 115 | 0-127   | -1.0 .. +1.0        | Linear |
| CC | MOD AFTER -TILT      | 116 | 0-127   | -1.0 .. +1.0        | Linear |
| CC | MOD AFTER -CURVE     | 117 | 0-127   | -1.0 .. +1.0        | linear |
| CC | NRPN Par LSB         | 98  | 0 - 127 |                     | -      |

|    |                          |         |         |                                                                |        |
|----|--------------------------|---------|---------|----------------------------------------------------------------|--------|
| CC | NRPN Par MSB             | 99      | 0 – 127 |                                                                | -      |
| CC | RPN Par LSB              | 100     | 0 – 127 |                                                                | -      |
| CC | RPN Par MSB              | 101     | 0 – 127 |                                                                | -      |
| CC | Note pressure LSB        | 102     | 0-127   |                                                                |        |
| CC | MPE timbre LSB           | 106     | 0-127   |                                                                |        |
| CC | All sound off            | 120     | -       | All notes off and cut sound                                    | -      |
| CC | All sound off            | 123     | -       | All notes off                                                  | -      |
| CC | OMNI off                 | 124     | -       | OMNI mode off, accept commands only on 1 channel               | -      |
| CC | OMNI on                  | 125     | -       | OMNI mode on, accept commands on all channels                  | -      |
| CC | MOD LIFT -DENS           | 128     | 0-127   | -1.0 .. +1.0                                                   | Linear |
| CC | MOD LIFT -CUTOFF         | 129     | 0-127   | -1.0 .. +1.0                                                   | Linear |
| CC | MOD LIFT-TUNE            | 130     | 0-127   | -1.0 .. +1.0                                                   | Linear |
| CC | MOD LIFT-POS             | 131     | 0-127   | -1.0 .. +1.0                                                   | Linear |
| CC | MOD LIFT-SPRAY           | 132     | 0-127   | -1.0 .. +1.0                                                   | Linear |
| CC | MOD LIFT-SIZE            | 133     | 0-127   | -1.0 .. +1.0                                                   | Linear |
| CC | MOD LIFT-SIDES           | 134     | 0-127   | -1.0 .. +1.0                                                   | Linear |
| CC | MOD LIFT-TILT            | 135     | 0-127   | -1.0 .. +1.0                                                   | Linear |
| CC | MOD LIFT-CURVE           | 136     | 0-127   | -1.0 .. +1.0                                                   | linear |
| CC | Enable part              | 138     | 0..3    | Part number = value + 1 (multitimbrality)                      |        |
| CC | Focus part               | 139     | 0..3    | Focus on part 1..4 (only one is highlighted) (multitimbrality) |        |
| CC | Scan part 1..4           | 140-143 | 0-127   | -2.0 .. +2.0                                                   | linear |
| CC | Map channel to part 1..4 | 166-169 | 0-16    | 0 OFF, >0 midi channel                                         |        |
| CC | Disable part             | 174     | 0..3    | Part number = value + 1 (multitimbrality)                      |        |
| CC | Map preset to part 1..4  | 175-178 | 0..31   |                                                                |        |
| CC | MOD PITCH -DENS          | 183     | 0-127   | -1.0 .. +1.0                                                   | Linear |
| CC | MOD PITCH -CUTOFF        | 184     | 0-127   | -1.0 .. +1.0                                                   | Linear |
| CC | MOD PITCH -TUNE          | 185     | 0-127   | -1.0 .. +1.0                                                   | Linear |
| CC | MOD PITCH -POS           | 186     | 0-127   | -1.0 .. +1.0                                                   | Linear |
| CC | MOD PITCH -SPRAY         | 187     | 0-127   | -1.0 .. +1.0                                                   | Linear |
| CC | MOD PITCH -SIZE          | 188     | 0-127   | -1.0 .. +1.0                                                   | Linear |
| CC | MOD PITCH -SIDES         | 189     | 0-127   | -1.0 .. +1.0                                                   | Linear |
| CC | MOD PITCH -TILT          | 190     | 0-127   | -1.0 .. +1.0                                                   | Linear |
| CC | MOD PITCH -CURVE         | 191     | 0-127   | -1.0 .. +1.0                                                   | Linear |
| CC | MOD PITCH -AMP           | 192     | 0-127   | -1.0 .. +1.0                                                   | Linear |
| CC | MOD PITCH -PANSPRAY      | 193     | 0-127   | -1.0 .. +1.0                                                   | Linear |
| CC | MOD LFO1-AMP             | 194     | 0-127   | -1.0 .. +1.0                                                   | Linear |
| CC | MOD LFO1-PANSPRAY        | 195     | 0-127   | -1.0 .. +1.0                                                   | Linear |
| CC | MOD LFO2-AMP             | 196     | 0-127   | -1.0 .. +1.0                                                   | Linear |
| CC | MOD LFO2-PANSPRAY        | 197     | 0-127   | -1.0 .. +1.0                                                   | Linear |
| CC | MOD CV1-AMP              | 198     | 0-127   | -1.0 .. +1.0                                                   | Linear |

|                |                               |     |       |                                                  |        |
|----------------|-------------------------------|-----|-------|--------------------------------------------------|--------|
| CC             | MOD CV1-PANSPRAY              | 199 | 0-127 | -1.0 .. +1.0                                     | Linear |
| CC             | MOD CV2-AMP                   | 200 | 0-127 | -1.0 .. +1.0                                     | Linear |
| CC             | MOD CV2-PANSPRAY              | 201 | 0-127 | -1.0 .. +1.0                                     | Linear |
| CC             | MOD TIMBRE-AMP                | 202 | 0-127 | -1.0 .. +1.0                                     | Linear |
| CC             | MOD TIMBRE<br>-PANSPRAY       | 203 | 0-127 | -1.0 .. +1.0                                     | Linear |
| CC             | MOD AFTER-AMP                 | 204 | 0-127 | -1.0 .. +1.0                                     | Linear |
| CC             | MOD AFTER-PANSPRAY            | 205 | 0-127 | -1.0 .. +1.0                                     | Linear |
| CC             | MOD LIFT-AMP                  | 206 | 0-127 | -1.0 .. +1.0                                     | Linear |
| CC             | MOD LIFT-PANSPRAY             | 207 | 0-127 | -1.0 .. +1.0                                     | Linear |
| CC             | MOD VELO-AMP                  | 208 | 0-127 | -1.0 .. +1.0                                     | Linear |
| CC             | MOD VELO-PANSPRAY             | 209 | 0-127 | -1.0 .. +1.0                                     | Linear |
| CC             | Resample anti-alias<br>on/off | 210 | 0..1  | NOTE: used to be CC37 in firmware prior to 2.2!  |        |
| CC             | Tapeslew                      | 211 | 0-127 | 0.0..1.0                                         | Linear |
| CC             | LFO1MUL                       | 212 | 0..9  | LFO1 MIDI clock multiplier - 1                   | -      |
| CC             | LFO1DIV                       | 213 | 0..9  | LFO1 MIDI clock divider - 1                      | -      |
| CC             | LFO2MUL                       | 214 | 0..9  | LFO2 MIDI clock multiplier - 1                   | -      |
| CC             | LFO2DIV                       | 215 | 0..9  | LFO2 MIDI clock divider - 1                      | -      |
| CC             | PAN                           | 216 | 0-127 | 100% left .. 100% right                          | Linear |
| CC             | Grain key sync                | 217 | 0-127 | 0:OFF, >=1:ON                                    |        |
| Timing         | Clock                         | 120 | -     | Clock tick to drive MIDI clock enabled controls. | -      |
| Timing         | Start                         | 122 | -     | Ignored, but accepted                            | -      |
| Timing         | Continue                      | 123 | -     | Ignored, but accepted                            | -      |
| Timing         | Stop                          | 124 | -     | Ignored, but accepted                            | -      |
| Timing         | Active sensing                | 125 | -     | Ignored, but accepted                            | -      |
| Timing/<br>Aux | Reset                         | 126 |       | Stop all voices.                                 |        |

## Precision MIDI: “NRPN”

The GR-1 also supports all the above CC parameters as Non-Registered Parameters Numbers (NRPN). This means you can use the normal 7 bit MIDI values, but also use 14 bit values if necessary. This allows for more than 128 controls, and for control values with 16384 steps instead of the normal 128.

All CC's that have range 0-127 (not the toggles, or triggers) are also available as 14 bit precision NRPN's. Since the GR-1 has many parameters that demand high precision, like sample position or filter cutoff, this feature exposes the full potential of GR-1 to MIDI controllers and sequencers.

Note that the GR-1's large modulation matrix is not fully represented as normal 7 bit CC, but also uses CC's that are only available as NRPN.

An NRPN is just 4 CC packets being sent:

CC header byte (176 + channel), 99, NRPN parameter MSB (upper 7 bit of CC number from above table)

CC header byte (176 + channel), 98, NRPN parameter LSB (lower 7 bit of CC number from above table)

CC header byte (176 + channel), 6, NRPN value MSB (high 7 bit of the 14 bit value)

CC header byte (176 + channel), 38, NRPN value LSB (low 7 bit of the 14 bit value)

For example, let's take parameter 2 (sample position) and set that to sample position 98.76% of the total length (16181 as a 14 bit number). We're using MIDI channel 1 (that's 0 in the header, since we start counting from 0).

176, 99, 0

176, 98, 2

176, 6,  $16181 \div 128 = 126$


176, 38,  $16181 \bmod 128 = 53$

## Firmware updates

**WARNING:** NEVER power down your GR-1 while updating the firmware. Data corruption may occur! Even in the extreme case of a freeze during update, please wait at least 30 seconds before attempting to power off!! If the above are not respected, the GR-1 may fail to boot on the next power up! You can then only recover through flashing the internal SD card, losing all your internally stored performances.

The GR-1 firmware can be updated via USB, and since version 2.0 also via the LAN port. To perform a firmware update via USB: download the latest version on [www.tastychips.nl/gr-1-support](http://www.tastychips.nl/gr-1-support) and follow the next steps:

- Place the `gr1_firmware_vx.y.z_abcdefgh.tgz` file in the “root directory” on a USB drive.
- **DO NOT UNZIP the tgz file!**
- Insert the USB drive in one of the 4 USB ports on your GR-1.

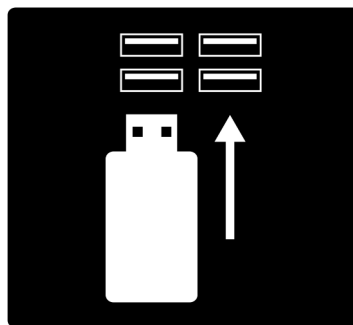


Alternatively, to perform a firmware update via the LAN port: please plug in a LAN cable from your router to the GR-1's LAN port. The LAN port is situated directly next to the 4 USB ports. LAN update is only available in firmware v2.0 onwards.

- Turn on/restart your GR-1, you will now see a window popping up
- Press “select” within 5 seconds to perform the firmware update



The firmware update will now start and takes less than a 30 seconds

- Remove the USB disk and restart the GR-1

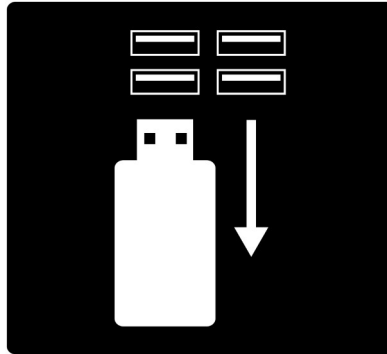

Keep in mind that when there is a firmware update in the root directory of a connected USB drive, the GR-1 will always boot with the “press “Select” to update” window. You might want to remove the firmware update from the USB drive when the update is done. The actual firmware version can be found here in the configuration menu (top right).

For updating without a reset first: From version 1.2 onwards it’s possible to use the Performance menu to enter the update screen:

- Shift+Perf
- Select “Check Firmware Upgrade”
- Push the Select knob (or turn on old firmwares).

See the troubleshooting chapter if you run into problems with updating.

## Frequently Asked Questions (FAQ)

Q: *I try to upgrade from an old firmware to 3.0, but it tells me "broken tgz file?"*

A: First try if this occurs when downloading the tgz file in other browsers, and try again. If that fails, try LAN update. If you have no access to a LAN cable, or if that fails too, then reflash the SD card. Read the manual section "Reflashing the internal storage" on how to do this.

We also have a video here: <https://www.youtube.com/watch?v=9SNr1eokdmo>

Q: *Why does the GR-1 come without a IEC power cable?*

A: This is because most people have at least a couple of these cables lying around left over from older discarded devices. It's better for the environment.

Q: *Why does the GR-1 come without a printed manual?*

A: Because the manual receives significant updates every few months, and it saves the environment.

Q: *I want to use the GR-1 as a normal sampler without granulation going on. How to do this?*

A: Patch menu (Shift+Patch) -> Sample mode -> Audition.

Q: *Why does the GR-1 not load with the latest performance I have loaded in last time?*

A: This was the case with firmware 1.x and 2.x. Since firmware 3 it does in fact do this.

Q: *There's just one filter? Is it then paraphonic? How to use the gr-1 as a fully polyphonic device?*

A: You can use MIDI MPE devices to achieve full polyphony. You can use sampled sweeps to emulate the polysynth's typical filter envelopes. Without MPE it indeed is somewhat paraphonic.

Q: *My USB stick or drive isn't working with the GR-1. How do I get it to work?*

A: See the troubleshooting section about USB drives.

Q: *My USB sound card isn't working with the GR-1. Is it supported at all?*

A: Only the so-called class compliant USB sound cards are supported. Others, especially most expensive or older cards require special driver support, and the GR-1 doesn't have that. However, there are hundreds of class compliant USB sound cards out there. Check the list in "Supported USB sound cards" for more information.

Q: *I have audio dropouts or a lowering of the density parameter. What is this, and how to avoid?*

A: See the "Polyphony" chapter.

Q: *The grain density seems to oscillate when there are a lot of grains (combination of high density and high grain size settings). What is this?*

A: This is normal. Per voice you can "only" have 128 simultaneous grains. The grain scheduler wants to add more, but the system refuses. Then some grains reach their end, and the scheduler can add grains again. This causes an oscillation. The trick is to limit the combination of the grain size and density setting a bit, and then the density will be constant. Another way is to raise the Grain stealing threshold. Standard this is 0 (no stealing).

*Q: How can I perform a factory reset?*

A: There are several ways, but the easiest is a button combo.

1. Go to the system menu: [Shift] + [Perf]
2. Hold down [Shift] + [Dest1] + [Dest2] + [Wave1] + [Wave2].

**THIS WILL DELETE ALL USER DATA!!**

Alternatively you can reflash the internal SD card. This will void the 2 year factory warranty. See the "reflash" section in this manual. You can also delete user files and copy factory files using the file manager or network file sharing.

*Q: I want to hook a GR-1 up to my DAW, how does this work?*

A: There are two ways:

1. DIN MIDI: Use a USB-to-DIN MIDI adapter/sound card, and hook it up to the GR-1's MIDI IN DIN port. This works well enough for standard MIDI controls like notes, pitch bend, and the odd CC. However, a DIN MIDI connection is not the best if you want to have a lot of smooth automations.
2. USB host-to-host interface. For instance, the iConnectivity mio2 or the Sevilla Soft MIDI USB-USB [<https://compasflamenco.com/midi-usb-p-4.html>]. As you may know the GR-1 has only USB A ports, and is a USB host. Your PC or Mac is also a host. There are no ways to directly make a USB connection between them. A host-to-host interface takes care of this.

*Q: Sometimes, when switching to a new preset, a parameter resets itself. What is this, and how to avoid?*

A: Since switching presets gives each knob a potentially different value, the actual knob position may not represent the underlying value anymore. Since the knobs are quite sensitive they may pick up the slightest movement or even noise in the system. To remedy this you can use "Setpoints" in the performance menu. That way the knobs are locked when switching presets. The lock disappears when you turn it to the actual value.

*Q: I want to save separate patches and samples to internal storage. Is that possible?*

A: In firmware 3.x it is.

*Q: I want to rename the performances in the internal storage. Is that possible?*

A: Sorry, no. For this, use a USB stick with folders you have created and named yourself.

*Q: In multitimbral mode, sometimes I cannot enable a specific part. What is this?*

A: The GR-1 doesn't allow the same preset to be active in multiple parts. Please make sure the other parts are assigned to other presets, and then you'll be able to activate this part again.

*Q: Windows says the firmware file contains a trojan? How can I still download the file?*

A: Windows 10 (and up?) is definitely wrong about this. In the .tgz archive there's an exe file, but it's an ARM/Linux executable, not an Intel/Windows executable. Disable Microsoft Defender and download. This is what is called a "false positive", and you should report it to Microsoft.

*Q: My GR-1 reacts to MIDI channels others than the ones I've configured. What's wrong?*

A: Turn off MPE in the performance menu.

*Q: I have MIDI controller X and the GR-1 reacts in a strange way. How to fix this?*

A: For some popular types of MIDI controllers we have the answer. For instance with Arturia controllers (Keystep, Beatstep) it's essential to disable transport CC's in their control application on the PC. The CC maps of the controllers and the GR-1 may be vastly different. The GR-1 doesn't adhere completely to General MIDI, and neither do many MIDI controllers. We cannot buy or lend every MIDI controller out there, so you just have to dump MIDI data from your controller and compare it with the GR-1 CC map found in the manual.

# Troubleshooting

## File systems (USB disk/stick format)

Using the right format, or *file system*, does help. On a Mac you can use “Disk Utility” and format it like this:

Format: **ExFat**

Scheme: GUID or MBR

In any case it should *not* be FAT32. MacOS (HFS+) is not correctly supported under Linux as of yet, causing to sometimes mount it read-only. APFS is completely unsupported. NTFS is properly supported, but is not readable on Mac. The old FAT32 is not recommended for bigger partitions ( $\geq 32\text{GB}$ ). So, if you want the smoothest experience, please use **ExFat** for everything. For Linux experts: Ext4 is fine as well.

Some USB drives and sticks come with special recovery partitions. Later MacOS formats sticks using such partitions. Older GR-1 firmware ( $<1.4.1$ ) just went ahead and mounted these partitions and allowed you to write to them. But these partitions are small (200 MB or so) and fill up very quickly. Also, they’re hard to access on PC/Mac. From firmware 1.4.1 onwards these partitions are skipped, as they should be. Please upgrade to the latest firmware available. Please contact us if problems persist.

## Multiple USB sticks or USB drives

The GR-1 initially didn’t support multiple USB sticks at the same time. Since firmware v2.1.8 it does support them. Please upgrade to the latest version, and contact us if problems persist.

## Firmware upgrades

Apple’s Safari browser seems to destroy .tgz files when you use the default settings (!). This will cause the update process to get stuck on older firmware! Firmware 1.4 and up do accept this type of mangled file. If you’re upgrading from a firmware older than 1.4, please download the file with another browser like Firefox or Chrome..

..or in Safari:

Alt + mouse click (downloads file instead of opening)

To always download-only instead of opening:

- Go to Preferences -> General

- Uncheck the box "Open "safe" files after downloading"
- Download the .tgz file again

Unfortunately, the Microsoft Edge and Explorer browsers also choose to mangle .tgz files to .gz for some reason. You can rename the extension of the downloaded file from .gz to .tgz, or if you like you can use another browser like Chrome or Firefox.

## Crashes (GRAVE-ULAR)

With early firmware this used to happen more often. Nowadays not so much, It seems that the only ones that occur today are leaving USB devices plugged in at boot (they require too much current for the GR-1 at startup).

This mostly happens because some USB devices require a lot of power and the GR-1 is not able to supply this peak power, especially while booting. The GR-1 protects itself by hanging and going into a "grey screen" displaying "GRAVE-ULAR, HARHAR". This has nothing to do with Jarjar Binks. The GR-1 freezes in this screen to protect itself from more weirdness.

If this should happen to you, please drop us a mail with specifics of the situation, preferably with screenshot, or better video. Firmware version number and serial number are also highly appreciated.

## Lightning bolts

If you see one of these while booting up, beware!



This means that the Raspberry Pi is having a hard time supplying current to the attached USB devices. Please unplug USB devices while starting up, and only insert them when fully up and running. Preferably one by one. **NEVER** insert USB devices while saving. Unrecoverable data corruption may occur!

## Slow USB drive or stick

Some sticks really are very slow. In our experience the branded ones are a lot faster than the cheap unbranded ones. These are perhaps 4 times slower or worse. Also, older firmware had a “slow” USB mode for compatibility. But since firmware 1.3.3 the GR-1 always runs in fast USB mode and is fully compatible with all USB MIDI controllers. Please upgrade to the latest version.

## Problematic USB stick or drive

It's a pretty seldom problem, but some USB sticks or hard disks create a lot of inrush current. When connected while booting, you may see a message like:

```
usb1-1.4: device descriptor read/64, error -32
```

This is basically the USB port freezing up because it has to provide too much current (power). In such a case, remove the USB device, and reboot until the GUI appears and then try attaching it again.

Even if the GR-1 boots up seemingly well with a hard disk, it may be that it has caused latent instability in the system. It's just better to only connect a hard disk once the GR-1 is fully up and running. Please contact us if you experience similar problems so we can advise and hopefully solve your problem, and improve our future products as well. Thank you.

## Recommended USB sticks

Kingston DTMC3G2/64GB, 64GB DataTraveler Micro 200MB/s Metal USB 3.2 Gen 1

Kingston DTSE9H/16GB, 16GB USB 2.0 DataTraveler SE9

## Reflashing the internal storage

This section describes a last resort when your GR-1:

- \* Refuses to update to a newer firmware,
- \* Refuses to boot or has become unstable.

Please only follow these steps if all else has failed. It may be that the internal storage, the Micro SD card located in the GR-1's Single Board Computer has become corrupted. So far, it seems that more than 5% of the units running 2.x firmwares have suffered from this at some point. There are 2 reasons for these:


- \* physical wear of the SD card (and one card may be better than the other, even if they're the same brand and model),
- \* software: corruption of the file system by switching off or loss of power. This is alleviated by firmware 3.0's shutdown procedure.

This section is for customers whose GR-1 is out of warranty (older than 2 years), or for customers who still have right to factory warranty (unit less than 2 years old) and cannot afford to wait to receive a new SD card from us. You will need some degree of compute skills in order to reflash the internal storage to a new SD card.

These instructions are also available as video: <https://www.youtube.com/watch?v=9SNr1eokdmo>

If you feel confident enough, read on:

1. OPTIONAL (only needed in 10% of the time): Buy a new Micro SD card of at least 32GB. You can find a list of suitable models here: [https://elinux.org/RPi\\_SD\\_cards](https://elinux.org/RPi_SD_cards)  
<https://www.androidcentral.com/best-sd-cards-raspberry-pi-4>  
We currently use Kingston Canvas Select 64GB. Kingston 64GB SDCE High Endurance may be better, but we have not yet tested!
2. Download Raspberry Pi Imager. Avoid Balena Etcher!  
<https://www.raspberrypi.org/downloads/>
3. Download the following image from our site:  
[https://www.tastychips.nl/downloads/GR-1/SD/gr1\\_3part\\_3.0.0-b9\\_15jan25.img.zip](https://www.tastychips.nl/downloads/GR-1/SD/gr1_3part_3.0.0-b9_15jan25.img.zip)
4. Use Raspberry Pi Imager to write the image to the SD card. You'll need a USB adapter for the Micro SD card or a card reader on your PC/Mac. It should be configured like this:

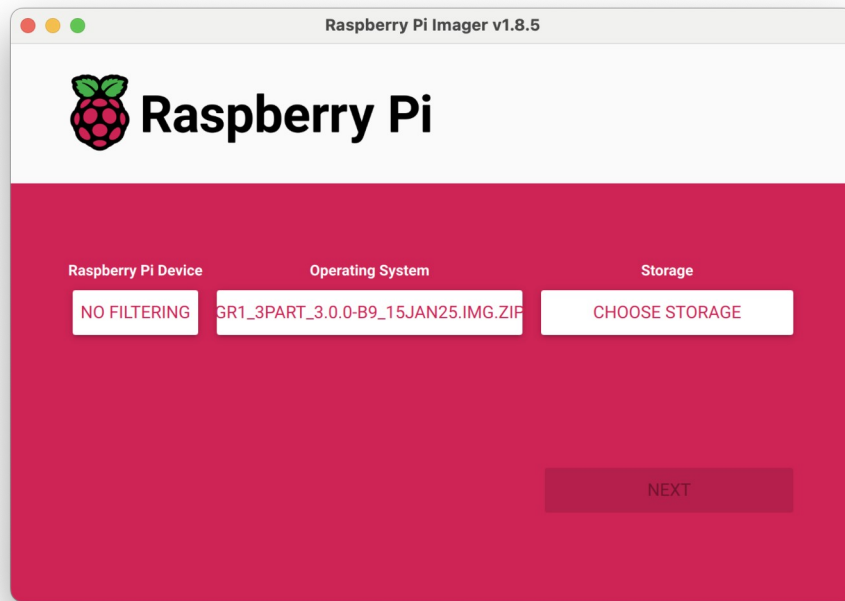

5. Power down the GR-1 and unscrew the GR-1's casing. The unscrewing consists of 7 countersunk M3 screws in total. *One of the bolts is behind the serial number seal.* Punching through this voids factory warranty. We can make an exception for you if you are performing a diagnosis at home, but only with our explicit permission.
6. Remove the old SD card from the Single Board Computer (typically a Raspberry Pi 3B or 3B+).
7. Insert the SD card in the Raspberry Pi's SD slot, and use a bit of duct tape or electrical tape to fasten it, just in case you'll be moving the GR-1 around a lot.
8. Start up the GR-1. It will reboot by itself to expand the file system to the full size of the SD card. Once it has fully booted test some basic functionality like the play button.
9. Upgrade to the latest firmware, downloadable from our support page <https://www.tastychips.nl/gr-1-support/#Firmware>, or using the LAN port.
10. Your GR-1 should now be ready to face the next couple of years.

# Credits

## GR-1 dev team

- Pieter van der Meer (Founder of Tasty Chips Electronics, Lead engineer)
- Jasper Andrea (Andrea Audio Productions)
- Koen Pepping (Vannes Engineering)
- Luc Derks (Sound design, QA, Illustration)

## Hired

- Niels Johannes de Wit (Software engineering)
- Bas van Geuns (Intro Animation video)
- Marco Galtarossa (3D renders)

## Hardware Granular Idea

- Erwin Tuijl (Pocket Knife Army)

# Special thanks to

## Brainstorm sessions

- Erwin Tuijl (Pocket Knife Army)
- Jasper Schutz
- Job de Klein
- Leon Stok
- Peter Johan Nyland
- Igor Zinken
- Lennart Denninger

## Feedback, tips and others

- Ad Nieuwenhuizen
- Jason France
- Nico Sijm

# Contact

## Tasty Chips Electronics

Email: info@tastychips.nl

Website: [www.tastychips.nl](http://www.tastychips.nl)

Youtube: <https://www.youtube.com/tastychips>

Facebook: <https://www.facebook.com/tastychipselectronics>

Instagram: [https://www.instagram.com/tastychips\\_synth](https://www.instagram.com/tastychips_synth)

Fb user group: <https://www.facebook.com/groups/tastychipsusergroup/>

